



HIGH EFFICIENCY AIR TO WATER HEAT PUMPS

LZT

SERIES



CE

TECHNICAL MANUAL

HIDROS

Via dell'Industria, 5
35020 Brugine PD Italy

Tel. 0039 049 9731022
Fax 0039 049 5806928

CE 1370

Organismo notificato / Organisme notifié
Notified body/Meldestelle/Anmält organ:
Bureau Veritas Italia Spa
V.le Monza,261 - 20126 MILANO

**DICHIARAZIONE DI CONFORMITA'
DECLARATION DE CONFORMITE
DECLARATION OF CONFORMITY
KONFORMITÄTSERKLÄRUNG
FÖRSÄKRAN OM ÖVERENSSTÄMMELSE**

BRUGINE

Macchina Modello / Unité Modéle / UNIT Model
Gerät Typ / Enhet Modell:

Matricola / Matricule / Serial no.
Serie nummer / Serienr

Direttive CEE / Directives CEE / EEC directive / CEE Richtlinie / EEC-direktiv:

(1)

- **2006/42 CE** Sicurezza delle macchine / Sécurité des machines / Safety of machinery / Sicherheit von Maschinen / Maskinsäkerhet.
 - **2004/108 C** Compatibilità elettromagnetica / Compatibilité électromagnétique / Elettromagnetic compatibility / Elektromagnetische Verträglichkeit / Elektromagnetisk kompatibilitet.
 - **2006/95 CE** Bassa tensione / Baisse tension / Low Voltage / Niedrige Spannung / Låg spänning
 - **97/23 CE** Dispositivi in pressione / Equipement sous pression / Under pressure devices / Drucksysteme entspricht / Tryckbärande anordnin
 - **2002/95 CE** Sostanze pericolose nelle apparecchiature elettr. / Substances dangereuses dans les équipements électr. / Hazardous substances in electr. equipment / Verwendung bestimmter gefährlicher Stoffe in der Elektronikgeräten
 - **2002/96 CE** Rifiuti di apparecchiature elettr. / déchets d'équipements électr. / Waste in electr. Equipment / Elektro- und Elektronik-Altgeräte / eller innehåller elektriska eller elektroniska produkter
- e loro successive integrazioni / et leurs intégrations suivantes / and their following amendments / und ihre folgende Verkündigungen / och deraas följande tillägg.

- Normative - Normes - Standards - Rechtsvorschriften - Normer :

(2)

- **EN 60204-1 12/1997** Sicurezza del macchinario-Equipaggiamento elettrico-Parte 1: Regole generali / Sécurité des machines-Equipement électrique-Partie 1: Règles générales / Safety machinery-electrical equipment of machines -Part 1: General requirements / 'Sicherheit von Maschinen; elektrische Ausrüstung von Maschinen. Teil 1: allgemeine Anforderung / Maskinsäkerhet-Elutrustning för maskiner-Allmänna fordringar.
- **EN 61000-6-3 2001** Compatibilità elettromagnetica-Norma generica sull'emissione-Parte 3: Ambiente residenziale / Compatibilité électromagnétique-Norme générique émission-Partie 3: Environnement résidentiel / Electromagnetic compatibility-Generic emission standard-Part 4: Residential environment / Elektromagnetische Verträglichkeit-Allgemeine Bestimmung über die Emission-Teil 3: Störaussendung für Wohnbereich / Elektromagnetisk kompatibilitet- Emission-Del 3: Generella fordringar - Emission från utrustning i bostäder, kontor,
- **EN 61000-6-2 2001** Compatibilità elettromagnetica-Norma generica sull'immunità-Parte 2: Ambiente industriale / Compatibilité électromagnétique-Norme générique immunité-Partie 2: Environnement industriel / Electromagnetic compatibility-Generic immunity standard-Part 2: Industrial environment □□□ Flüssigkeitssammler* / Reciver* Elektromagnetische Verträglichkeit-Allgemeine Bestimmung über die Immunität-Teil 2: industrieller Raum / Elektromagnetisk kompatibilitet -Immunitet-Del 2: Generella fordringar på utrustning i industrimiljö.
- **EN 12100-2 2005** Sicurezza del macchinario - Concetti fondamentali, principi generali di progettazione. Specifiche e principi tecnici. / Critères fondamentaux, principes généraux de projet. Specifications et principes techniques. / Safety of machinery - Basic concepts, General principles for design Part 2: Technical principles specification / Grundbegriffe, allgemeine. Gestaltungsleitsätze, technische Leitsätze und Spezifikationen. Maskinsäkerhet-Grundläggande begrepp, allmänna konstruktionsprinciper-Del 2: Tekniska principer
- **EN 294 1993** Sicurezza del macchinario - Distanze di sicurezza per impedire il raggiungimento di zone pericolose con gli arti superiori. Distances de sécurité pour empêcher le contact des membres supérieurs avec des zones dangereuses. Safety standards (avoidance of personal injury). / Sicherheitsabstände gegen das Erreichen von Gefahrenstellen mit den oberen Gliedmaßen. / Maskinsäkerhet-Skyddsavstånd för att hindra att man når riskområden med händer och armar.
- **EN 349 1994** Sicurezza del macchinario - Spazi minimi per evitare lo schiacciamento di parti del corpo umano. / Espaces minimum pour éviter l'écrasement de parties du corps. / Safety of machinery - Minimum gaps avoid crushing of parts of the human body / Mindestabstände zur Vermeidung des Quetschens von Körpersteilen. / Maskinsäkerhet-Minimiumtrymme för att undvika att kroppsdelar krossas.
- **EN 378-2 2002** Dispositivi in pressione - Impianti di refrigerazione e pompe di calore: requisiti di sicurezza e ambientali - Parte 2: progettazione, costruzione, collaudo, installazione, marcatura e documentazione / Systèmes de réfrigération et pompes à chaleur - prescriptions en matière de sécurité et d'environnement 2e partie: conception, construction, test, installation, marquage et documentation / Refrigeration systems and heat pumps - Safety and environmental requirements - Part 2: design, construction, test, instation, marking and documentation / Kältemaschinen und Wärmepumpen - Sicherheits und Umweltbestimmungen - Teil 2: Design, Konstruktion, Abnahmeprüfungen, Installation, Kennzeichnung und technische Unterlagen / Kylsystem och värmepumpar - säkerhets och miljökraav - Del 2: design, konstruktion, provning, installation, märkning och dokumentation.

Moduli di valutazione di conformità alla direttiva 97/23 utilizzati per i componenti
Formulaire de évaluation de conformité avec la directive 97/23 CEE utilisés pour les composants
Procedures in compliance with 97/23 CEE directive to be used for the components
Konformitätprozedur nach der Richtlinie 97/23 CEE für die bauteile
Metod i överrenstämmande med 97/23 CEE standard som används för komponenter

Componente / Composant / Component / Bauteil / Komponent	Modulo/Proced./Proced./Prozed./Metod
Compressore / Compresseur / Compressor / Verdichter / Kompressor	D1
Evaporatore / Evaporateur / Evaporator / Verdampfer / Förlångare	B+D / NA**
Condensatore / Condenseur / Condenser / Verflüssiger / Kondensator	B+D / NA**
Ricevitore* / Réservoir de liquide* / Liquid receiver* / Flüssigkeitssammler* / Receiver*	B+D / NA**
Separatore* / Separateur de liquide* / Liquid separator* / Abscheider* / Vätskeavskiljar	A1
Valvola sicurezza* / Vanne sécurité* / Safety valve* / Sicherheitsventil* / Säkerhetsventi	B+D
Pressostati di sicurezza / Pressostats / Safety pressure switch / Druckschalter / Pressosta	B+D
* se presente / si present / if presents / wenn vorhanden / om sådan finns monterd	
** se batteria alettata / si batterie à ailettes / if finned coil / bei beripptem register / vid lamellbatteri	

Certificato n° / Certificat n° / Certificate n° / Zertifikate N° / Certifikat n° : CE-1370-PED-A1-HID001-07-ITA

Si dichiara, sotto la nostra responsabilità, che le forniture sopra indicate sono conformi in ogni parte alle direttive CEE di cui al punto (1). Le forniture sono state prodotte, collaudate e verificate con riferimento alle normative di cui al punto (2).

Nous déclarons sous notre responsabilité que les fournitures susmentionnées se conforment totalement aux directives CEE comme déclaré dans le point (1). Les fournitures ont été fabriquées, testées et contrôlées faisant référence aux normes susmentionnées au point (2).


We declare under our responsibility that the a.m. supplies are fully in conformity with the EEC regulations stated in the point (1). The equipment(s) have been manufactured, tested and checked following the standards stated in the point (2).

Wir bestätigen auf unsere Verantwortung, daß die oben angeführten Lieferungen den im Punkt (1) berichteten CEE Rechtsvorschriften voll entsprechen. Die Geräte wurden in Bezug auf die im Punkt (2) berichteten Vorschriften erzeugt und geprüft.

Vi försäkrar härmed att ovan nämnda produkter överensstämmer helt och hållet med de EEC-direktiv som anges i (1). Produkterna är tillverkade, testade och kontrollerade enligt de normer som anges i (2).

- Il Legale Rappresentante - Le P.D.G. - The Managing Director - Unser offizieller Vertreter - Vd :

Vittorio Pozza

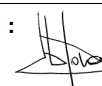

INDEX

Declaration of conformity	page3
Aim and contents of this manual	page 6
How to keep this manual	page 6
Graphic symbols	page 6
Safety laws	page 7
General safety guidelines	page 7
Workers' health and safety	page 8
Protective equipment	page 8
Safety signs	page 8
Technical characteristics	page 9
Other versions	page 10
Accessories	page 10
Technical data	page 11
Heating capacity and compressors input power	page 12
Domestic hot water production	page 14
Cooling capacity and compressors input power	page 15
User heat exchanger water pressure drops	page 16
Domestic hot water heat exchanger water pressure drops	page 17
User circuit water pumps available static pressure	page 18
Operation limits	page 19
Corrections tables	page 20
Sound Data	page 20
Safety Device Setting	page 21
Electric data	page 21
Inspection	page 21
Lifting and handling	page 21
Location and minimum technical clearances	page 22
Installation of the hoods	page 23
Hydraulic connections	page 24
Refrigerant circuit layout	page 27
Electrical connections	page 29
Start up	page 29
Controls during operation	page 30
Maintenance and periodic checks	page 30
Refrigerant circuit repair	page 31
Environment protection	page 31
Unit out of service	page 31
Fault finding	page 31
Dimensions	page 33

The LZT manual, contains any information that is needed for a correct use of the equipment while safeguarding operator safety, according to what indicated from "Council Directive" 98/37/CE and following changes.

AIM AND CONTENTS OF THIS MANUAL

This manual provides basic information on the installation, operation and maintenance off the LZT unit. It is addressed to machine operators and it enables them to use the equipment efficiently, even if they do not have any previous specific knowledge of it. This manual describes the characteristics of the equipment at the time it is being put on the market; therefore it may not capture later technological improvements introduced by HIDROS SRL as part of its constant endeavour to enhance the performance, ergonomics, safety and functionality of its products.

HOW TO KEEP THIS MANUAL

The manual must be always with the unit it refers to. It must be stored in a safe place, away from the dust and moisture. It must be accessible to all users who shall consult it any time they are in doubt on how to operate the equipment. HIDROS SRL reserves the right to modify its products and related manuals without necessarily updating previous versions of the reference material. The customer shall store any updated copy of the manual or parts of it delivered by the manufacturer as an attachment to this manual. HIDROS SRL is available to give any detailed information about this manual and to give information regarding the use and the maintenance of its own units.

GRAPHIC SYMBLS



Indicates operations that can be dangerous for people and/or disrupts the correct operation of the equipment..



Indicates prohibited operations.



Indicates important information that the operator must follow in order to guarantee the correct operation of the equipment in complete safety

SAFETY LAWS

HIDROS SRL's equipment and their component parts have been designed in compliance with the harmonised EC norms in force and other European and national norms as required by the Council Directive (98/37 and later amendments).

The equipment is also compliant with:

- Norms EN 292-1 e 292-2
- Norma EN 294
- Norms EN 378-1, 378-2, 378-3 e 378-4
- Norma EN 418
- Norma EN 953
- Norma EN 1050
- Norma EN 60204-1
- Norma EN 61000-6-2
- Norma EN 61000-6-4
- Community Directives 98/37/CE, 97/23/CE, 93/68/CEE, 89/336/CEE 73/23/CEE

GENERAL SAFETY GUIDELINES

Before beginning to operate on LZT units every user must be perfectly knowledgeable about the functions of the equipment and its controls and must have read and understood the information container in this manual.



It's strictly forbidden to remove and/or camper with any safety device.



Any routine or not-routine maintenance operation shall be carried out when the equipment has been shut down, disconnected from electric and pneumatic power source and after its pneumatic system has been discharged.



Do not put your hands or insert screwdrivers, spanners or other tools into moving parts of the equipment.



The equipment supervisor and the maintenance man must receive training suitable for the performance of their tasks in safety



Operators must know how to use personal protective devices and must know the accident-prevention guidelines contained in national and international laws and norms.

WORKERS' HEALTH AND SAFETY

The European Community has adopted a number of directives on workplace health and safety, which include directives **89/391/CEE**, **89/686/CEE**, **89/655/CEE**, **86/188/CEE** and **77/576/CEE**. Every employer shall implement such provisions and ensure that workers respect them:



Do not tamper with or replace parts of the equipment without the specific consent of the manufacturer. The manufacturer shall have no responsibility whatsoever in case of unauthorised operations.



Using components, expendable materials or spare parts that do not correspond to those recommended by the manufacturer and/or listed in this manual may be dangerous for the operators and/or damage the equipment



The operator's workplace must be kept clean, tidy and free from objects that may hamper free movements. Appropriate lighting of the work place shall be provided so as to allow the operator to carry out the required operations safely. Poor or too strong lighting can cause risks.



Ensure that work places are always adequately ventilated and that aspirators are working, in good condition and in compliance with the requirements of the laws in force..

PERSONAL PROTECTIVE EQUIPMENT

When operating and maintaining the LZT unit, use the following personal protective equipment.



Protective clothing: Maintenance men and operators must wear protective clothing that complies with the basic safety requirements currently in force. In case of slippery floors users must wear safety shoes with non-slip soles.



Gloves: During maintenance or cleaning operation protection gloves must be used



Mask and goggles: Respiratory protection (mask) and eye protection (goggles) should be used during cleaning and maintenance operations.

SAFETY SIGNS

The equipment features the following safety signs, which must be complied with:



General hazard



Electric shock hazard

TECHNICAL CHARACTERISTICS

The high efficiency LZT heat pump series have been especially designed for application with radiant floor heating systems or in those applications where it is necessary to have the highest maximum efficiency in heating mode. The units have been optimized for heating mode, they are able to produce water up to 60°C and they can operate down to -15°C ambient temperature. All models are supplied standard with reverse cycle valve for cold water production.

Frame

All LZT units are made from hot-galvanised thick sheet metal, painted with polyurethane powder enamel at 180°C to ensure the best resistance against the atmospheric agents. The frame is self-supporting with removable panels. All screws and rivets for outdoor installations are in stainless steel. The colour of the units is RAL 7035.

Refrigerant circuit

The refrigerant gas used in these units is R407C. The refrigerant circuit is made by using international primary brands components and according to ISO 97/23 concerning welding procedures. The refrigerant circuit includes:

sight glass, filter drier, double thermal expansion valves (one for cooling mode, one for heating mode) with external equalizer, 4 way reverse cycle valve, one way valves, liquid receiver, Schrader valves for maintenance and control, pressure safety device (according to PED regulation). Models starting from 09T are also supplied with an AISI316 stainless steel heat exchanger used as economizer and additional expansion valve for refrigerant vapour injection.

Compressors

The compressors used are *high performance scroll type*, supplied with a special scroll design who enhance the efficiency of the refrigerant cycle at low ambient conditions. Units starting from model 09T, are also supplied with an additional heat exchanger used as economizer and a vapour injection system, used to enlarge the working range. The compressors are all supplied with crankcase heater and thermal overload protection by a klixon embedded in the motor winding. They are mounted in a separate chamber in order to be separated from the air stream. The crankcase heater is always powered when the compressor is in stand-by. The inspection is possible through the frontal panel of the unit that allow the maintenance of the compressors even if the unit is working.

Source heat exchanger

The source heat exchangers are made of copper pipes and aluminium fins. The diameter of the copper pipes is 3/8" and the thickness of the aluminium fins is 0,1 mm. The tubes are mechanically expanded into the aluminium fins to improve the heat exchange factor. The geometry of these condensers guarantee a low air side pressure drop and then the use of low rotation (and low noise emission) fans. The source heat exchangers can be protected by a metallic filter to be installed on request.

Fans

The fans are axial type with aluminium aerofoil blades. They are statically and dynamically balanced and supplied complete of the safety fan guard according to EN 60335. They are mounted on the unit frame by interposition of rubber vibration dampers. The electric motors are all at 6 poles (about 900 rpm). The motors are directly driven with an integrated thermal overload protection. The protection class of the motors is IP 54.

User heat exchangers

The user heat exchangers are made of AISI 316 stainless steel braze-welded plates type. The use of these kind of heat exchangers allows a massive reduction of the refrigerant charge of the unit compared to the traditional shell-in-tube evaporators and also a reduction of the overall dimensions of the unit. The user heat exchangers are factory insulated with flexible close cell material and can be equipped with antifreeze heater (optional). Each heat exchanger is provided with a temperature sensor as antifreeze protection.

Electric box

The electric box is made according to electromagnetic compatibility norms CEE 73/23 and 89/336. The accessibility to the board is possible after removing the front panel of the unit. The protection degree is IP55. In all LZT units are installed, standard, the compressors sequence relay who disable the operation of the compressor in case the power supply phase sequence is not the correct one (scroll compressors in fact, can be damaged if they rotate reverse wise). The following components are also standard installed: main switch, magnetic-thermal switches (as a protection of pumps and fans), compressors fuses, control circuit automatic breakers, compressor contactors, fan contactors, pump contactors. The terminal board is supplied with voltage free contacts for remote ON-OFF, winter/summer change over and general alarm.

Microprocessors

All LZT units are supplied standard with microprocessor controls. The microprocessor controls the following functions: regulation of the water temperature, antifreeze protection, compressor timing, compressor automatic starting sequence, alarm reset. The control panel is supplied with display showing all operational icons. The microprocessor is set for automatic defrost (in case of operation in severe ambient conditions) and for summer/winter/domestic hot water change over (SW6 versions only). Upon request any microprocessor can be connected to a BMS system for the remote control and management. The technical department is available to study, together with the customer, different solutions using MODBUS; LONWORKS; BACNET or TREND protocols.

Control and protection devices

All units are supplied with the following control and protection devices: Return user water temperature sensor, antifreeze protection sensor installed on the user outlet water temperature, return and supply domestic hot water sensors (SW6 versions only), high pressure switch with manual reset, low pressure switch with automatic reset, high pressure safety valve, compressor thermal overload protection, fans thermal overload protection, pressure transducer (used to optimize the defrost cycle and the fan speed depending on the ambient conditions), flow switch.

OTHER VERSIONS**LZT/SW6 UNIT WITH DOMESTIC HOT WATER PRODUCTION**

This version is suitable to produce domestic hot water: the unit is supplied with an additional heat exchanger used as condenser for the domestic hot water that, is independently from the operation mode of the unit. The activation of the additional heat exchanger is done automatically by the microprocessor control when the domestic hot water temperature measured by the sensor is lower than the required set point. *This unit allow the production of cold and hot water at the same time independently.* This version is supplied with return/supplied domestic hot water sensors and advanced control panel with specific software able to manage the operation priorities.

LZT / A1 HIGH EFFICIENCY HEAT PUMP WITH INTEGRATED HYDRAULIC KIT

The LZT heat pumps can be delivered as option, with a built in hydraulic kit that includes:

Water tank in different sizes (depending on the size of the unit), factory insulated with flexible close cell material and prepared for the installation of antifreeze kit (option). The water tank is installed on the hot water outlet water side to minimize the inevitable fluctuations in the water temperature due to the compressors starts and stops. The installation of the water tank on the hot water outlet water side keeps constant, for a period of time, the user water temperature when the compressors are Off, while this can not be obtained if the water tank is installed on the hot water inlet water side.

Water pump, centrifugal type, suitable for chilled water operation. The pump is directly controlled by the microprocessor that controls its correct operation. In the hydraulic circuit are also present the expansion vessel, the safety valve and the eventual manual valves with fittings.

LZT/LS LOW NOISE VERSION

This version includes the complete acoustic insulation of the unit (compressor + heat exchangers vanes) with compressor jackets and insulating material made with high density media and the interposition of heavy bitumen layer.

ACCESSORIES

SOUND ATTENUATION HOODS (mod. 05,07,09,09T,13,20 only) These devices are installed on the units to minimize the sound level; they are made from hot-galvanised thick sheet metal, painted with polyurethane powder enamel at 180°C to ensure the best resistance against the atmospheric agents. The hoods are internally insulated with PU foam material, with the interposition of high density non toxic bitumen-free barrier. They are mounted on the unit by stainless steel screws.

REMOTE CONTROL PANEL It allows the remote control of all parameters of the unit.

RUBBER VIBRATION DAMPERS To be installed beneath the unit base and the ground to avoid the transmission of vibrations (and the noise) to the building.

EVAPORATOR ANTIFREEZE HEATER It is made by a "self-heating" electric cable mounted around the evaporator in order to avoid dangerous freezing of the water inside it. It is controlled by the microprocessor. It can be used in the units without hydraulic kit

ANTIFREEZE KIT It is made by a "self-heating" electric cable mounted around the evaporator and the water pipes plus an armoured electric heater fitted inside the water tank. This device is controlled by the microprocessor and it is used in the version A1 with integrated hydraulic kit.

INTEGRATION ELECTRIC HEATER To be installed in the water tank can be used to integrate the water in case the heat pump can not reach the set point due to very critical ambient conditions. The device can be installed in the water tank (A1 versions only) to integrate the user hot water temperature, or supplied separately to integrate the domestic hot water temperature circuit.

TECHNICAL DATA

Mod.		05	07	09	09T	13	20	25	30	40
Refrigerant	kW	R407C	R407C	R407C	R407C	R407C	R407C	R407C	R407C	R407C
Heating capacity ⁽¹⁾	kW	5,5	7,8	9,5	8,9	13,2	19,0	22,2	26,5	37,9
Heating capacity ⁽²⁾	kW	5,2	7,2	8,9	8,8	13,4	18,6	22,1	26,8	37,2
Heating capacity ⁽³⁾	kW	4,5	6,2	7,6	7,6	11,8	16,5	19,5	23,7	33,1
Compressors input power ⁽¹⁾	kW	1,5	1,9	2,3	2,2	3,0	4,4	5,2	6,0	8,8
Domestic hot water capacity ⁽⁴⁾	kW	4,5	6,2	7,6	7,6	11,8	16,5	19,5	23,7	33,1
Compressors input power ⁽⁴⁾	kW	1,8	2,4	2,9	2,7	3,9	5,6	6,7	7,8	11,3
Cooling capacity ⁽⁵⁾	kW	4,7	6,7	8,4	7,7	11,9	16,6	19,6	23,8	33,2
Compressors input power ⁽⁵⁾	kW	1,8	2,2	2,7	2,7	3,6	5,3	6,3	7,2	10,5
Total input current	A	8,6	10,4	14,3	5,6	7,7	12,4	13,4	14,8	22,6
Maximum input current	A	15,8	19,8	24,8	7,3	12,0	16,8	19,4	23,4	31,4
Maximum peak current	A	59,3	77,3	98,3	41,3	66,0	103,8	73,4	77,4	118,4
Power supply		230/1/50				400/3+N/50				
Airflow	m3/h	3000	3000	3000	3000	5000	8000	10800	10800	10800
Fans	n° x kW	1x 0,28	1x 0,28	1x 0,28	1x 0,28	2 x 0,2	2 x 0,31	2 x 0,37	2 x 0,37	2 x 0,37
Compressor type		Scroll			Scroll with economizer and vapour injection					
	n°	1	1	1	1	1	1	2	2	2
Refrigerant circuit	n°	1	1	1	1	1	1	1	1	1
Sound power level ⁽⁶⁾	dB(A)	68	68	68	68	70	74	79	79	79
Sound pressure level ⁽⁷⁾	dB(A)	40	40	40	40	42	46	51	51	51
Water pump (option)	kW	0,25	0,25	0,25	0,25	0,37	0,37	0,55	0,55	0,55
Water tank capacity (option)	lt.	40	40	40	40	50	60	180	180	180
Expansion vessel (option)	lt.	2	2	2	2	2	2	5	5	5
Integration electric heater (option)	kW	3	3	3	3	6	6	9	9	9
Length	mm	1103	1103	1103	1103	1203	1453	1870	1870	1870
Width	mm	380	380	380	380	423	473	850	850	850
Height	mm	989	989	989	989	1323	1423	1406	1406	1406
Weight (Basic version)	Kg	95	104	118	125	133	188	350	390	420
Weight (Hydraulic kit version)	Kg	148	163	179	184	212	267	510	550	580

Working conditions

- (1) Heating: Ambient temp. 7°C, Water 35/30°C.
- (2) Heating: Ambient temp. 7°C, Water 50/45°C.
- (3) Heating: Ambient temp. 2°C, Water 50/45°C.
- (4) Domestic hot water capacity: Ambient temp. 2°C, Water 50/45°C.
- (5) Cooling: Ambient temp. 35°C, Water 12/7°C.
- (6) Sound power level according to ISO 3746.
- (7) Sound pressure level measured at 10 mt from the unit in free field conditions direction factor Q=2 according to ISO 3746.

HEATING CAPACITY AND COMPRESSORS INPUT POWER

Mod.	TAMB (°C)	PH (kW)						PA (kW)						COP					
		TWUC (°C)						TWUC (°C)						W/W					
		35	40	45	50	55	60	35	40	45	50	55	60	35	40	45	50	55	60
LZT 05	-15	2,5	2,5					1,2	1,3					2,1	1,9				
	-10	3,1	3,0					1,3	1,4					2,4	2,2				
	-7	3,4	3,4	3,4				1,3	1,4	1,5				2,7	2,4	2,2			
	-5	3,7	3,6	3,6				1,3	1,4	1,6				2,8	2,5	2,3			
	-2	4,1	4,0	4,0	4,0			1,3	1,5	1,6	1,8			3,0	2,7	2,5	2,3		
	0	4,4	4,3	4,2	4,2	4,2		1,4	1,5	1,6	1,8	2,0		3,2	2,9	2,6	2,3	2,1	
	2	4,7	4,6	4,5	4,5	4,5		1,4	1,5	1,7	1,8	2,0		3,4	3,0	2,7	2,5	2,2	
	5	5,2	5,1	5,0	4,9	4,9		1,4	1,6	1,7	1,9	2,1		3,6	3,2	2,9	2,6	2,4	
	7	5,5	5,4	5,3	5,2	5,2		1,5	1,6	1,7	1,9	2,1		3,8	3,4	3,0	2,7	2,5	
	10	6,1	6,0	5,8	5,7	5,7		1,5	1,6	1,8	2,0	2,2		4,0	3,6	3,2	2,9	2,6	
15	7,2	7,0	6,8	6,7	6,6		1,6	1,7	1,9	2,1	2,3		4,5	4,0	3,6	3,2	2,9		

Mod.	TAMB (°C)	PH (kW)						PA (kW)						COP					
		TWUC (°C)						TWUC (°C)						W/W					
		35	40	45	50	55	60	35	40	45	50	55	60	35	40	45	50	55	60
LZT 07	-15	3,6	3,5					1,6	1,7					2,3	2,0				
	-10	4,4	4,3					1,7	1,8					2,6	2,3				
	-7	4,8	4,7	4,7				1,7	1,9	2,0				2,9	2,6	2,3			
	-5	5,2	5,1	5,0				1,7	1,9	2,1				3,0	2,7	2,4			
	-2	5,8	5,6	5,5	5,4			1,8	1,9	2,1	2,3			3,3	2,9	2,6	2,3		
	0	6,2	6,0	5,9	5,8	5,6		1,8	2,0	2,2	2,4	2,6		3,5	3,1	2,7	2,5	2,2	
	2	6,6	6,4	6,3	6,2	6,0		1,8	2,0	2,2	2,4	2,6		3,6	3,2	2,9	2,6	2,3	
	5	7,3	7,1	6,9	6,8	6,6		1,9	2,0	2,2	2,4	2,7		3,9	3,5	3,1	2,8	2,5	
	7	7,8	7,6	7,4	7,2	7,0		1,9	2,1	2,3	2,5	2,7		4,1	3,7	3,3	2,9	2,6	
	10	8,6	8,3	8,1	7,9	7,6		1,9	2,1	2,3	2,5	2,8		4,4	3,9	3,5	3,1	2,8	
15	10,1	9,8	9,5	9,2	8,8		2,0	2,2	2,4	2,7	2,9		5,0	4,4	3,9	3,5	3,1		

Mod.	TAMB (°C)	PH (kW)						PA (kW)						COP					
		TWUC (°C)						TWUC (°C)						W/W					
		35	40	45	50	55	60	35	40	45	50	55	60	35	40	45	50	55	60
LZT 09	-15	4,3	4,3					1,8	2,0					2,4	2,2				
	-10	5,2	5,2					1,9	2,1					2,7	2,5				
	-7	5,8	5,7	5,7				2,0	2,2	2,4				2,9	2,6	2,4			
	-5	6,2	6,2	6,1				2,0	2,2	2,4				3,1	2,8	2,5			
	-2	6,9	6,8	6,7	6,7			2,1	2,3	2,5	2,8			3,3	3,0	2,7	2,4		
	0	7,5	7,3	7,2	7,1	7,0		2,1	2,3	2,6	2,8	3,1		3,5	3,1	2,8	2,5	2,3	
	2	8,0	7,8	7,7	7,6	7,5		2,2	2,4	2,6	2,9	3,1		3,7	3,3	2,9	2,6	2,4	
	5	8,9	8,7	8,5	8,3	8,2		2,2	2,4	2,7	3,0	3,2		4,0	3,6	3,2	2,8	2,5	
	7	9,5	9,3	9,1	8,9	8,7		2,3	2,5	2,7	3,0	3,3		4,2	3,7	3,3	3,0	2,6	
	10	10,6	10,3	10,0	9,7	9,5		2,3	2,5	2,8	3,1	3,4		4,6	4,0	3,6	3,2	2,8	
15	12,5	12,2	11,8	11,4	11,1		2,4	2,7	2,9	3,2	3,5		5,1	4,6	4,0	3,6	3,1		

Mod.	TAMB (°C)	PH (kW)						PA (kW)						COP					
		TWUC (°C)						TWUC (°C)						W/W					
		35	40	45	50	55	60	35	40	45	50	55	60	35	40	45	50	55	60
LZT 09T	-15	4,4	4,6	4,8	5,0	1,7	1,9	2,2	2,5	2,6	2,4	2,2	2,0
	-10	5,2	5,3	5,4	5,6	5,8	...	1,8	2,0	2,2	2,5	2,9	...	2,9	2,7	2,4	2,2	2,0	...
	-7	5,8	5,8	5,9	6,0	6,1	6,3	1,8	2,0	2,3	2,5	2,9	3,3	3,1	2,9	2,6	2,4	2,1	1,9
	-5	6,2	6,2	6,2	6,3	6,4	6,6	1,9	2,1	2,3	2,6	2,9	3,3	3,3	3,0	2,7	2,5	2,2	2,0
	-2	6,8	6,8	6,8	6,9	6,9	7,0	1,9	2,1	2,4	2,6	3,0	3,4	3,5	3,2	2,9	2,6	2,3	2,1
	0	7,2	7,2	7,2	7,2	7,3	7,3	2,0	2,2	2,4	2,7	3,0	3,4	3,6	3,3	3,0	2,7	2,4	2,2
	2	7,7	7,6	7,6	7,6	7,7	7,7	2,0	2,2	2,5	2,7	3,1	3,4	3,8	3,4	3,1	2,8	2,5	2,2
	5	8,4	8,3	8,3	8,3	8,3	8,3	2,1	2,3	2,5	2,8	3,1	3,5	4,0	3,6	3,3	3,0	2,6	2,4
	7	8,9	8,8	8,8	8,8	8,7	8,7	2,2	2,4	2,6	2,9	3,2	3,6	4,1	3,7	3,4	3,1	2,7	2,4
	10	9,7	9,6	9,6	9,5	9,4	9,4	2,2	2,4	2,7	3,0	3,3	3,7	4,3	3,9	3,6	3,2	2,9	2,6
15	11,1	11,0	10,9	10,8	10,8	...	2,4	2,6	2,8	3,1	3,4	...	4,7	4,2	3,8	3,5	3,1	...	

TWUC: User Outlet water temperature (°C)
 PH: Heating capacity (Kw)

TAMB: Ambient temperature dry bulb (°C)
 PA: Compressors input power (Kw)

HEATING CAPACITY AND COMPRESSORS INPUT POWER

Mod.	TAMB (°C)	PH (kW)						PA (kW)						COP					
		TWUC (°C)						TWUC (°C)						W/W					
		35	40	45	50	55	60	35	40	45	50	55	60	35	40	45	50	55	60
LZT 13	-15	7,1	7,3	7,6	8,0	2,7	3,0	3,3	3,7	2,6	2,5	2,3	2,2
	-10	8,2	8,4	8,6	8,9	9,2	...	2,8	3,0	3,4	3,7	4,2	...	2,9	2,8	2,6	2,4	2,2	...
	-7	8,9	9,1	9,3	9,5	9,8	10,1	2,8	3,1	3,4	3,8	4,2	4,8	3,2	2,9	2,7	2,5	2,3	2,1
	-5	9,4	9,6	9,8	10,0	10,2	10,5	2,9	3,1	3,4	3,8	4,3	4,8	3,3	3,1	2,9	2,6	2,4	2,2
	-2	10,3	10,4	10,6	10,7	10,9	11,2	2,9	3,2	3,5	3,9	4,3	4,9	3,6	3,3	3,0	2,8	2,5	2,3
	0	10,9	11,0	11,1	11,3	11,4	11,6	2,9	3,2	3,5	3,9	4,3	4,9	3,7	3,4	3,2	2,9	2,6	2,4
	2	11,5	11,6	11,7	11,8	12,0	12,2	2,9	3,2	3,5	3,9	4,4	4,9	3,9	3,6	3,3	3,0	2,7	2,5
	5	12,5	12,6	12,7	12,8	12,9	13,0	3,0	3,3	3,6	4,0	4,4	5,0	4,2	3,8	3,5	3,2	2,9	2,6
	7	13,2	13,3	13,3	13,4	13,5	13,6	3,0	3,3	3,6	4,0	4,5	5,0	4,4	4,0	3,7	3,3	3,0	2,7
	10	14,4	14,4	14,4	14,4	14,4	14,5	3,1	3,4	3,7	4,1	4,5	5,0	4,7	4,3	3,9	3,5	3,2	2,9
15	16,4	16,3	16,3	16,2	16,2	...	3,1	3,4	3,8	4,2	4,6	...	5,2	4,8	4,3	3,9	3,5	...	

Mod.	TAMB (°C)	PH (kW)						PA (kW)						COP					
		TWUC (°C)						TWUC (°C)						W/W					
		35	40	45	50	55	60	35	40	45	50	55	60	35	40	45	50	55	60
LZT 20	-15	10,1	10,3	10,5	10,7	3,8	4,1	4,6	5,1	2,7	2,5	2,3	2,1
	-10	11,8	12,0	12,1	12,3	12,5	...	3,9	4,3	4,7	5,2	5,8	...	3,0	2,8	2,6	2,4	2,1	...
	-7	12,9	13,1	13,2	13,3	13,4	13,5	4,0	4,4	4,8	5,3	5,9	6,7	3,2	3,0	2,7	2,5	2,3	2,0
	-5	13,7	13,8	13,9	14,0	14,0	14,1	4,1	4,4	4,9	5,4	6,0	6,7	3,4	3,1	2,8	2,6	2,3	2,1
	-2	14,9	14,9	15,0	15,0	15,0	15,1	4,1	4,5	5,0	5,5	6,1	6,9	3,6	3,3	3,0	2,7	2,5	2,2
	0	15,7	15,8	15,8	15,8	15,7	15,7	4,2	4,6	5,0	5,6	6,2	6,9	3,8	3,4	3,1	2,8	2,5	2,3
	2	16,6	16,6	16,6	16,5	16,5	16,4	4,2	4,6	5,1	5,6	6,3	7,0	3,9	3,6	3,3	2,9	2,6	2,3
	5	18,0	17,9	17,9	17,8	17,6	17,5	4,3	4,7	5,2	5,7	6,4	7,1	4,2	3,8	3,4	3,1	2,8	2,5
	7	19,0	18,9	18,8	18,6	18,4	18,2	4,4	4,8	5,3	5,8	6,4	7,2	4,3	3,9	3,6	3,2	2,9	2,5
	10	20,5	20,4	20,2	20,0	19,8	19,5	4,5	4,9	5,4	5,9	6,5	7,3	4,6	4,2	3,8	3,4	3,0	2,7
15	23,4	23,2	22,9	22,6	22,2	...	4,6	5,1	5,5	6,1	6,7	...	5,1	4,6	4,1	3,7	3,3	...	

Mod.	TAMB (°C)	PH (kW)						PA (kW)						COP					
		TWUC (°C)						TWUC (°C)						W/W					
		35	40	45	50	55	60	35	40	45	50	55	60	35	40	45	50	55	60
LZT 25	-15	11,5	11,9	12,4	13,0	4,4	4,9	5,4	6,1	2,6	2,4	2,3	2,1
	-10	13,4	13,7	14,0	14,5	15,0	...	4,6	5,0	5,6	6,2	7,1	...	2,9	2,7	2,5	2,3	2,1	...
	-7	14,7	14,9	15,2	15,5	15,9	16,4	4,7	5,1	5,7	6,3	7,1	8,1	3,1	2,9	2,7	2,5	2,2	2,0
	-5	15,6	15,8	16,0	16,3	16,7	17,1	4,7	5,2	5,7	6,4	7,2	8,1	3,3	3,0	2,8	2,6	2,3	2,1
	-2	17,1	17,2	17,4	17,6	17,9	18,2	4,8	5,3	5,8	6,5	7,3	8,2	3,5	3,2	3,0	2,7	2,5	2,2
	0	18,1	18,2	18,3	18,5	18,7	19,0	4,9	5,4	5,9	6,6	7,3	8,3	3,7	3,4	3,1	2,8	2,5	2,3
	2	19,2	19,3	19,4	19,5	19,7	19,8	5,0	5,5	6,0	6,7	7,4	8,4	3,8	3,5	3,2	2,9	2,6	2,4
	5	21,0	20,9	21,0	21,0	21,1	21,3	5,1	5,6	6,1	6,8	7,6	8,5	4,1	3,8	3,4	3,1	2,8	2,5
	7	22,2	22,1	22,1	22,1	22,2	22,3	5,2	5,7	6,2	6,9	7,6	8,6	4,3	3,9	3,6	3,2	2,9	2,6
	10	24,1	24,0	23,9	23,9	23,9	23,9	5,3	5,8	6,4	7,0	7,8	8,7	4,5	4,1	3,8	3,4	3,1	2,7
15	27,5	27,3	27,2	27,1	27,0	...	5,5	6,0	6,6	7,3	8,1	...	5,0	4,5	4,1	3,7	3,3	...	

Mod.	TAMB (°C)	PH (kW)						PA (kW)						COP					
		TWUC (°C)						TWUC (°C)						W/W					
		35	40	45	50	55	60	35	40	45	50	55	60	35	40	45	50	55	60
LZT 30	-15	14,2	14,7	15,3	16,0	5,4	5,9	6,6	7,3	2,6	2,5	2,3	2,2
	-10	16,3	16,8	17,2	17,8	18,4	...	5,6	6,1	6,7	7,5	8,4	...	2,9	2,8	2,6	2,4	2,2	...
	-7	17,8	18,2	18,6	19,1	19,6	20,2	5,6	6,2	6,8	7,6	8,5	9,6	3,2	2,9	2,7	2,5	2,3	2,1
	-5	18,9	19,2	19,6	20,0	20,5	21,0	5,7	6,2	6,9	7,6	8,5	9,6	3,3	3,1	2,9	2,6	2,4	2,2
	-2	20,6	20,8	21,1	21,5	21,9	22,3	5,8	6,3	7,0	7,7	8,6	9,7	3,6	3,3	3,0	2,8	2,5	2,3
	0	21,8	22,0	22,3	22,6	22,9	23,3	5,8	6,4	7,0	7,8	8,7	9,8	3,7	3,4	3,2	2,9	2,6	2,4
	2	23,1	23,2	23,4	23,7	24,0	24,3	5,9	6,5	7,1	7,8	8,7	9,8	3,9	3,6	3,3	3,0	2,7	2,5
	5	25,1	25,2	25,3	25,5	25,7	26,0	6,0	6,5	7,2	8,0	8,9	9,9	4,2	3,8	3,5	3,2	2,9	2,6
	7	26,5	26,6	26,7	26,8	26,9	27,1	6,0	6,6	7,3	8,0	8,9	10,0	4,4	4,0	3,7	3,3	3,0	2,7
	10	28,7	28,7	28,8	28,8	28,9	29,0	6,1	6,7	7,4	8,1	9,0	10,1	4,7	4,3	3,9	3,5	3,2	2,9
15	32,7	32,6	32,6	32,5	32,4	...	6,2	6,9	7,6	8,3	9,2	...	5,2	4,8	4,3	3,9	3,5	...	

TWUC: User Outlet water temperature (°C)
PA: Compressors input power (Kw)

TAMB: Ambient temperature dry bulb (°C)
PH: Heating capacity (Kw)

HEATING CAPACITY AND COMPRESSORS INPUT POWER

Mod.	TAMB (°C)	PH (kW)						PA (kW)						COP					
		TWUC (°C)						TWUC (°C)						W/W					
		35	40	45	50	55	60	35	40	45	50	55	60	35	40	45	50	55	60
LZT 40	-15	20,2	20,6	21,0	21,5	7,6	8,3	9,1	10,1	2,7	2,5	2,3	2,1
	-10	23,7	24,0	24,3	24,6	25,0	...	7,8	8,6	9,4	10,5	11,7	...	3,0	2,8	2,6	2,4	2,1	...
	-7	25,9	26,1	26,3	26,6	26,8	27,1	8,0	8,7	9,6	10,7	11,9	13,4	3,2	3,0	2,7	2,5	2,3	2,0
	-5	27,4	27,6	27,7	27,9	28,1	28,3	8,1	8,9	9,7	10,8	12,0	13,5	3,4	3,1	2,8	2,6	2,3	2,1
	-2	29,8	29,9	30,0	30,0	30,1	30,1	8,3	9,0	9,9	11,0	12,2	13,7	3,6	3,3	3,0	2,7	2,5	2,2
	0	31,5	31,5	31,5	31,5	31,5	31,4	8,4	9,2	10,1	11,1	12,4	13,8	3,8	3,4	3,1	2,8	2,5	2,3
	2	33,2	33,2	33,1	33,1	32,9	32,8	8,5	9,3	10,2	11,3	12,5	14,0	3,9	3,6	3,3	2,9	2,6	2,3
	5	36,0	35,9	35,7	35,5	35,3	35,0	8,7	9,5	10,4	11,5	12,7	14,2	4,2	3,8	3,4	3,1	2,8	2,5
	7	37,9	37,8	37,5	37,2	36,9	36,5	8,8	9,6	10,5	11,6	12,9	14,3	4,3	3,9	3,6	3,2	2,9	2,5
	10	41,1	40,8	40,4	40,0	39,5	39,0	9,0	9,8	10,7	11,8	13,1	14,6	4,6	4,2	3,8	3,4	3,0	2,7
15	46,8	46,3	45,8	45,1	44,3	...	9,3	10,1	11,1	12,2	13,4	...	5,1	4,6	4,1	3,7	3,3	...	

TWUC: User Outlet water temperature (°C)
PA: Compressors input power (Kw)

TAMB: Ambient temperature dry bulb (°C)
PH: Heating capacity (Kw)

DOMESTIC HOT WATER PRODUCTION (SW6 VERSIONS ONLY)

The maximum domestic hot water capacity and its temperature can be calculated in the table at pages 12,13,14 depending on the ambient and the user water outlet conditions. The table below shows the capacity of the model LZT13/SW6.

Mod.	TAMB (°C)	PH (kW)						PA (kW)						COP					
		TWUC (°C)						TWUC (°C)						W/W					
		35	40	45	50	55	60	35	40	45	50	55	60	35	40	45	50	55	60
LZT 13	-15	7,1	7,3	7,6	8,0	2,7	3,0	3,3	3,7	2,6	2,5	2,3	2,2
	-10	8,2	8,4	8,6	8,9	9,2	...	2,8	3,0	3,4	3,7	4,2	...	2,9	2,8	2,6	2,4	2,2	...
	-7	8,9	9,1	9,3	9,5	9,8	10,1	2,8	3,1	3,4	3,8	4,2	4,8	3,2	2,9	2,7	2,5	2,3	2,1
	-5	9,4	9,6	9,8	10,0	10,2	10,5	2,9	3,1	3,4	3,8	4,3	4,8	3,3	3,1	2,9	2,6	2,4	2,2
	-2	10,3	10,4	10,6	10,7	10,9	11,2	2,9	3,2	3,5	3,9	4,3	4,9	3,6	3,3	3,0	2,8	2,5	2,3
	0	10,9	11,0	11,1	11,3	11,4	11,6	2,9	3,2	3,5	3,9	4,3	4,9	3,7	3,4	3,2	2,9	2,6	2,4
	2	11,5	11,6	11,7	11,8	12,0	12,2	2,9	3,2	3,5	3,9	4,4	4,9	3,9	3,6	3,3	3,0	2,7	2,5
	5	12,5	12,6	12,7	12,8	12,9	13,0	3,0	3,3	3,6	4,0	4,4	5,0	4,2	3,8	3,5	3,2	2,9	2,6
	7	13,2	13,3	13,3	13,4	13,5	13,6	3,0	3,3	3,6	4,0	4,5	5,0	4,4	4,0	3,7	3,3	3,0	2,7
	10	14,4	14,4	14,4	14,4	14,4	14,5	3,1	3,4	3,7	4,1	4,5	5,0	4,7	4,3	3,9	3,5	3,2	2,9
15	16,4	16,3	16,3	16,2	16,2	...	3,1	3,4	3,8	4,2	4,6	...	5,2	4,8	4,3	3,9	3,5	...	


For example, The heat pump model LZT 13/SW6 can produce domestic hot water temperature up to 60°C (Heating capacity 12,2 kW) when TAMB (Ambient temperature) is 2C. In case the TAMB is -10°C, the maximum domestic hot temperature will be 55°C and the capacity 9,2 kW.

TWUC: User Outlet water temperature (°C)
PA: Compressors input power (Kw)


TAMB: Ambient temperature dry bulb (°C)
PH: Heating capacity (Kw)

LDK
COOLING CAPACITY AND COMPRESSORS INPUT POWER

PA = Compressor input power

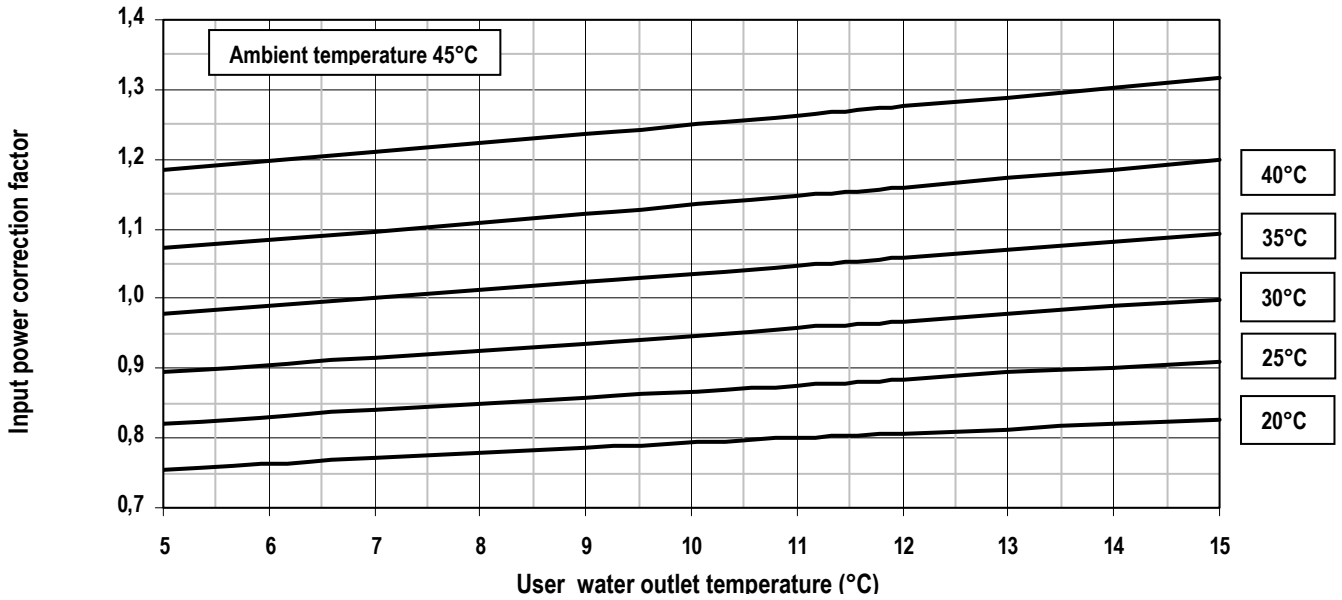


PF = Cooling capacity

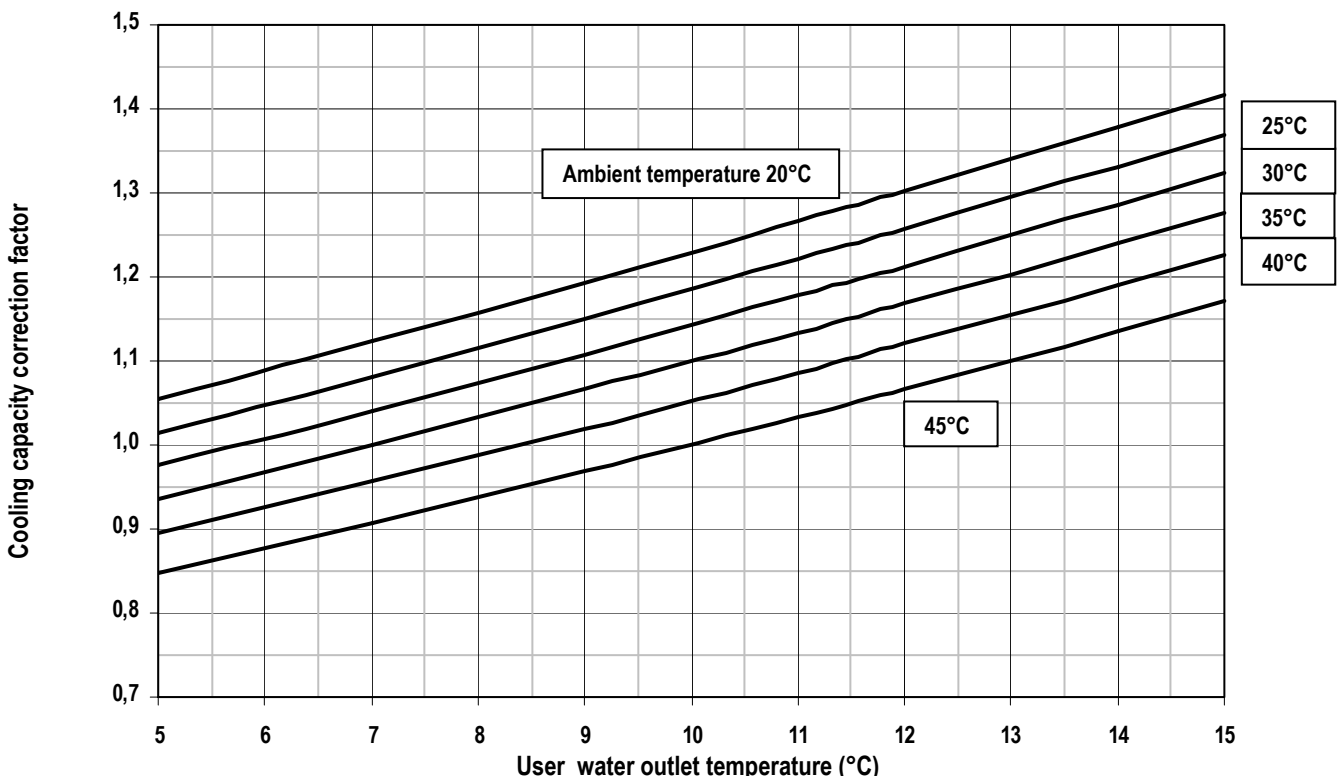


The cooling capacity and the compressors input power in different working conditions can be obtained by multiplying the nominal values (PF, PA) with their respective correction factors. The diagram above indicates the correction factors; for each curve, the relative ambient conditions, assuming that the difference between inlet and outlet cold water temperature is 5°C.


USER HEAT EXCHANGER WATER PRESSURE DROPS

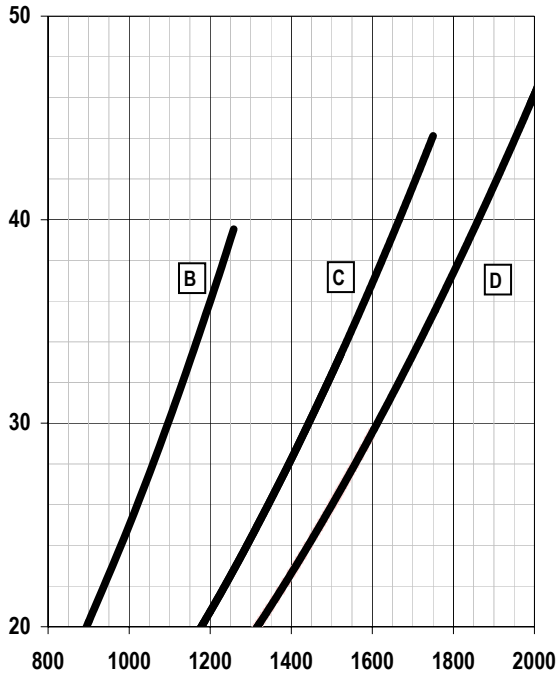

B: LZT 05
C: LZT 07
D: LZT 09

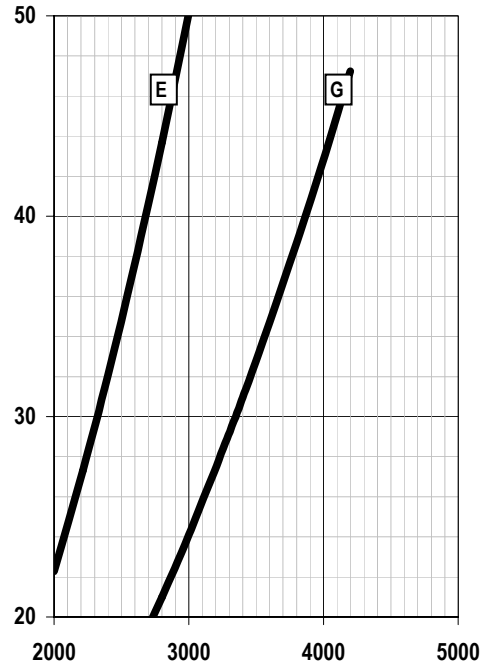


E: LZT 13
G: LZT 20 - 25

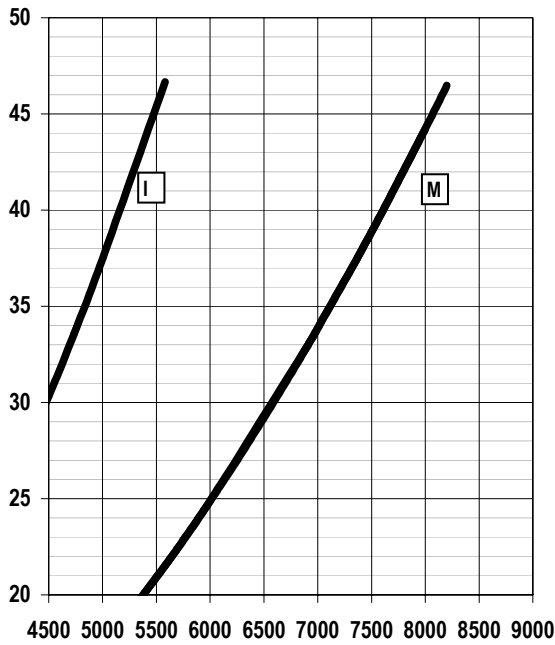


I: LZT 30
M: LZT 40


DOMESTIC HOT WATER HEAT EXCHANGER WATER PRESSURE DROPS

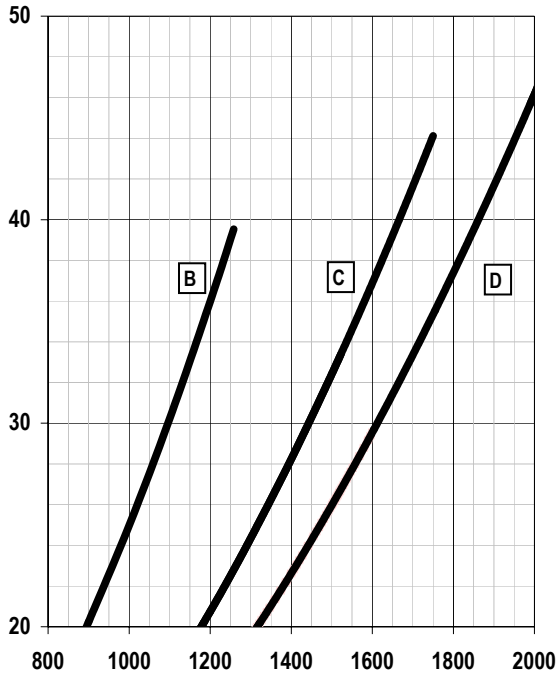

B: LZT 05
C: LZT 07
D: LZT 09

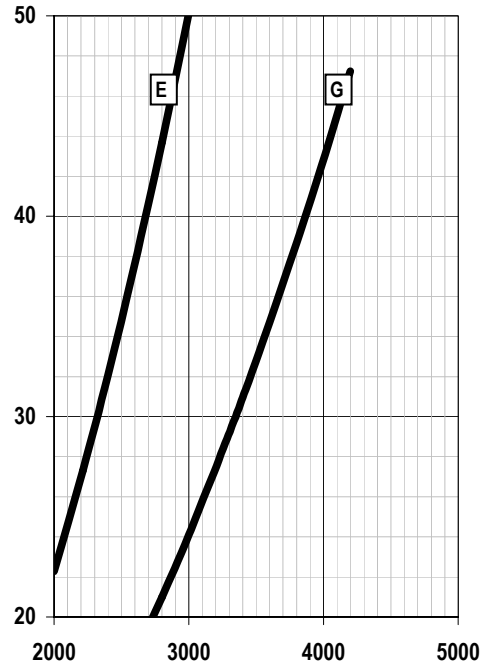


E: LZT 13
G: LZT 20 - 25

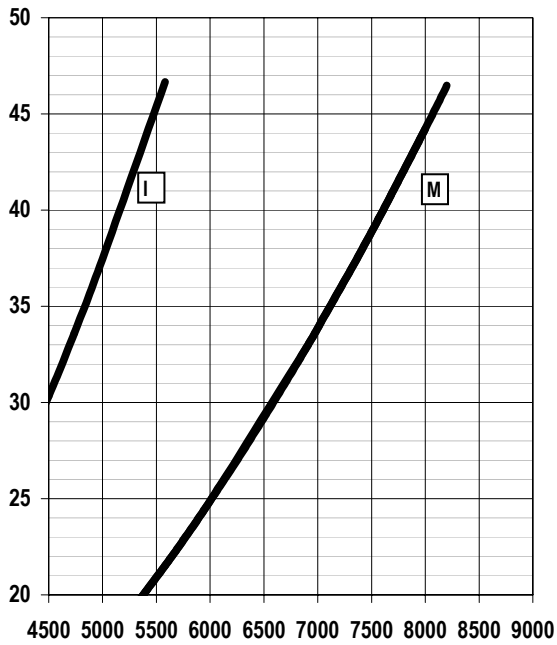


I: LZT 30
M: LZT 40


USER CIRCUIT WATER PUMPS AVAILABLE STATIC PRESSURE

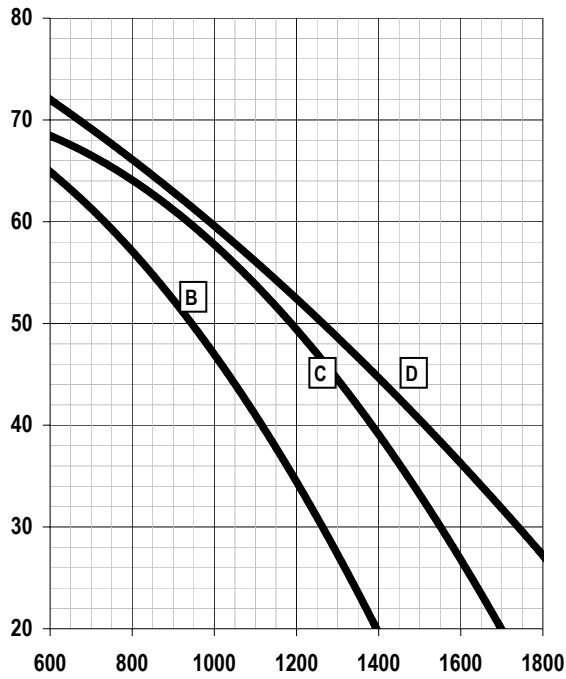

B: LZT 05
C: LZT 07
D: LZT 09

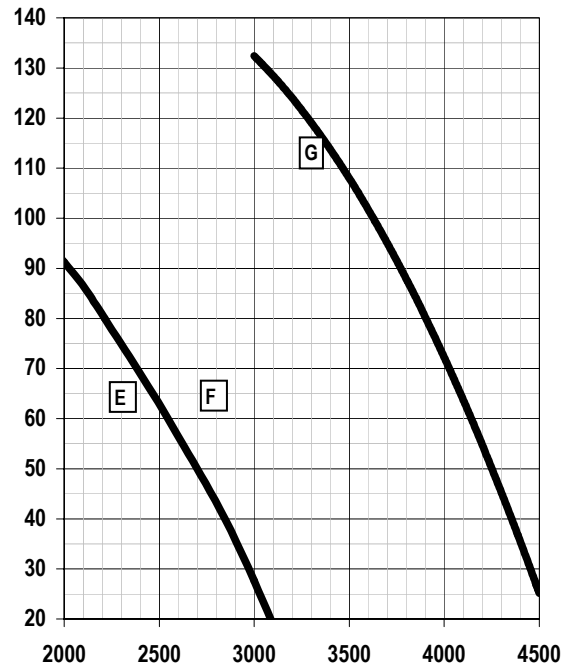


E: LZT 13
G: LZT 20 - 25

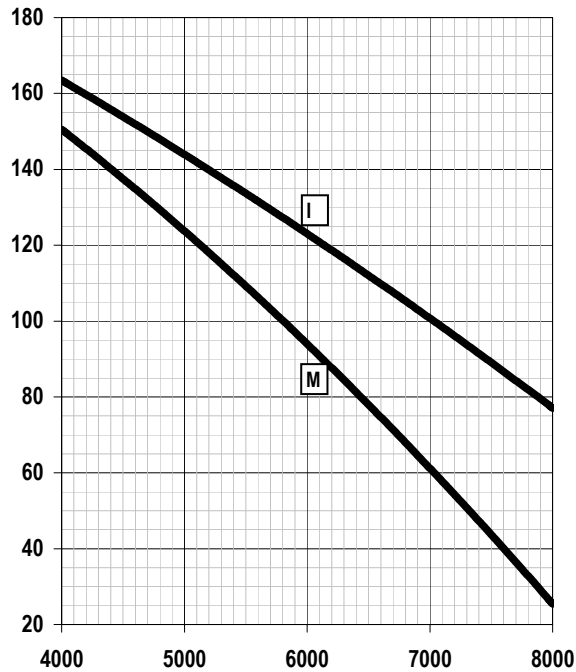

I: LZT 30
M: LZT 40

OPERATION LIMITS

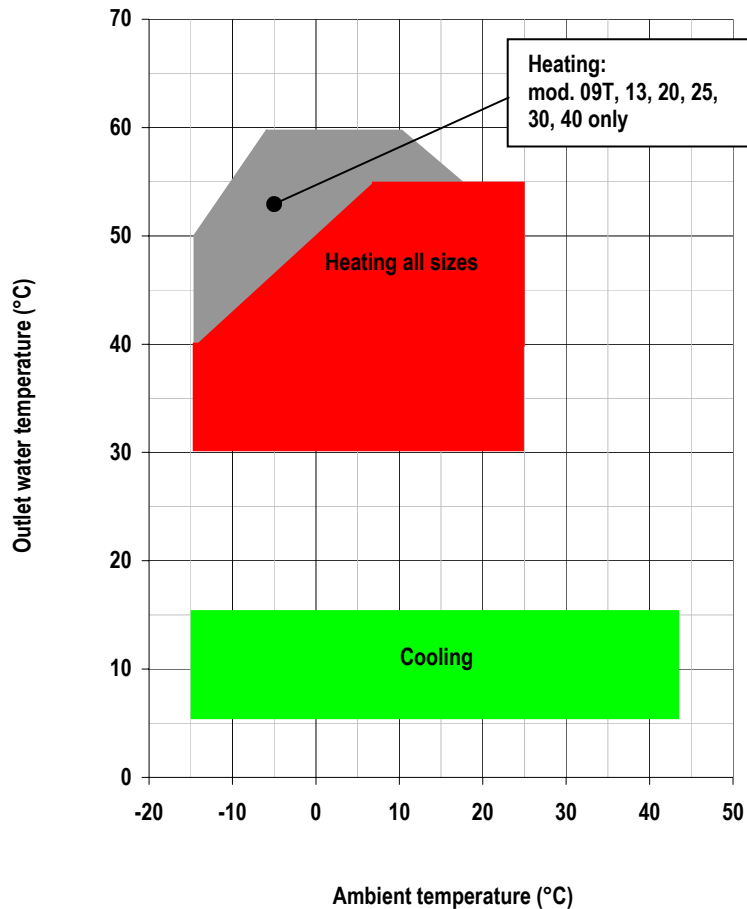

User heat exchanger water flow rate

The nominal water flow rate given by HIDROS is referred to a Δt of 5 °C. Maximum flow rate allowed is the one that presents a Δt of 3 °C: higher values may cause too high pressure drop. The minimum water flow rate allowed is the one presenting a Δt of 8 °C. Insufficient values cause too low evaporating temperatures with the action of safety devices which would stop the unit.

User hot water temperature (winter operation)

Once the system is on temperature, user hot water temperature at the user heat exchanger inlet does not have to be less than 30 °C: lower values could cause incorrect working operation of the compressor and compressor failure may occur. The maximum user water temperature can not exceed 60°C (sizes 09T,13,20,25,30,40) or 55°C (sizes 05,07,09); higher values may call the action of safety devices with unit stop.

Cold water temperature (summer operation)

The minimum temperature allowed at the evaporator outlet is 5 °C. To work below this limit, the unit should need some structural modifications. In this case contact our company. The maximum temperature allowed at the evaporator outlet is 15°C.

Ambient air temperature

The units are designed and manufactured to operate, In winter operation (heating mode) from -15°C to 25°C. In cooling mode the units can operate with ambient air temperatures from 20 to 43°C.



WARNING: All units are supplied standard with evaporation / condensing pressure control. This device allows unit operation in heating mode over 15°C and in cooling mode under 20°C ambient temperature. The device modulates the airflow measured by a pressure transducer obtaining, in this way, correct operating parameters. This device can be used as well to reduce unit sound level emission in cooling mode when ambient temperature is decreasing (i.e. during night time). Fan speed control is factory pre-set. The values must never be modified.

CORRECTION TABLES Operation with glycol

Glycol percentage	Freezing point (°C)	CCF	IPCF	WFCF	PDCF
10	-3,2	0,985	1	1,02	1,08
20	-7,8	0,98	0,99	1,05	1,12
30	-14,1	0,97	0,98	1,09	1,22
40	-22,3	0,965	0,97	1,14	1,25
50	-33,8	0,955	0,965	1,2	1,33

CCF: Capacity correction factor IPCF: Input power correction factor
 WFCF: Water flow correction factor PDCF: Pressure drops correction factor.

The water flow rate and pressure drop correction factors are to be applied directly to the values given for operation without glycol. The water flow rate correction factor is calculated in order to maintain the same temperature difference as that which would be obtained without glycol. The pressure drop correction factor takes into account the different flow rate obtained from the application of the flow rate correction factor.

CORRECTION TABLES different DT

Water temperature diff.(°C)	3	5	8
CCCP	0,99	1	1,02
IPCF	0,99	1	1,01

CCCP = Cooling capacity correction factor. IPCF = Input power correction factor.

CORRECTION TABLES Different Fouling factors

Fouling factor	0,00005	0,0001	0,0002
CCCP	1	0,98	0,94
IPCF	1	0,98	0,95

CCCP = Cooling capacity correction factor. IPCF = Input power correction factor.

SOUND DATA

LZT/LS (LOW NOISE VERSION)											
Mod.	Octave bands (Hz)								Lw		Lp
	63	125	250	500	1K	2K	4K	8K	dB	dB(A)	dB(A)
	dB	dB	dB	dB	dB	dB	dB	dB			
05-07	80,9	72,3	66,2	64,7	63,6	58,2	54,8	45,7	81,9	68,0	40,0
09-09T	80,9	72,3	66,2	64,7	63,6	58,2	54,8	45,7	81,9	68,0	40,0
13	81,9	73,3	67,2	65,7	64,6	59,2	55,8	46,7	82,9	69,0	41,0
20	86,9	78,3	72,2	70,7	69,6	64,2	60,8	51,7	87,9	74,0	46,0
25	91,9	83,3	77,2	75,7	74,6	69,2	65,8	56,7	92,9	79,0	51,0
30	91,9	83,3	77,2	75,7	74,6	69,2	65,8	56,7	92,9	79,0	51,0
40	91,9	83,3	77,2	75,7	74,6	69,2	65,8	56,7	92,9	79,0	51,0

LZT/LS (LOW NOISE VERSION) WITH SUPPLY/RETURN SOUND ATTENUATION HOODS											
Mod.	Octave bands (Hz)								Lw		Lp
	63	125	250	500	1K	2K	4K	8K	dB	dB(A)	dB(A)
	dB	dB	dB	dB	dB	dB	dB	dB			
05-07	76,1	67,3	61,2	59,7	58,6	53,2	49,8	40,7	76,9	63,0	35,0
09-09T	76,1	67,3	61,2	59,7	58,6	53,2	49,8	40,7	76,9	63,0	35,0
13	77,1	68,3	62,2	60,7	59,6	54,2	50,8	41,7	77,9	64,0	36,0
20	82,1	73,3	67,2	65,7	64,6	59,2	55,8	46,7	82,9	69,0	41,0



WARNING: The sound pressure level of the STANDARD VERSIONS without compressor jackets and compressor vane insulation is approx. 1,5 dB(A) higher than the equivalent low noise versions LS.

Lw: Sound power level according to ISO 3746.

Lp: Sound pressure level measured at 10 mt from the unit in free field conditions direction factor Q=2 according to ISO 3746.

SAFETY DEVICE SETTING

Device		Set-point	Differential	Differential
Control thermostat (summer)	°C	20	2	...
Control thermostat (Domestic hot water)	°C	40	2	...
Control thermostat (winter)	°C	40	2	...
Anti-freeze thermostat	°C	4	6	MANUAL
Electric heater thermostat	°C	4	6	MANUAL
High pressure switch	Bar	28	7	MANUAL
Low pressure switch	Bar	0,7	1	MANUAL
Water safety valve (Optional)	Bar	6

ELECTRIC DATA

Power supply	V/~/Hz	230/1/50 (Sizes 05,07,09); 400 / 3+N / 50 (Sizes 09T,13,20,25,30,40)
Control board	V/~/Hz	24 / 1 / 50
Auxiliary circuit	V/~/Hz	230 / 1 / 50
Fans power supply	V/~/Hz	230/1/ 50

Electric data may change for updating. It is therefore necessary to refer always to the wiring diagram inside the units.




WARNING: All this operation described in next chapters MUST BE DONE BY TRAINED PEOPLE ONLY. Before every operation of servicing on the unit, be sure that the electric supply is disconnected.

INSPECTION

When installing or servicing the unit, it is necessary to strictly follow the rules reported on this manual, to conform to all the specifications of the labels on the unit, and to take any possible precautions of the case. Not observing the rules reported on this manual can create dangerous situations. After receiving the unit, immediately check its integrity. The unit left the factory in perfect condition; any eventual damage must be questioned to the carrier and recorded on the Delivery Note before it is signed. HIDROS must be informed, within 8 days, of the extent of the damage. The Customer should prepare a written statement of any severe damage.


LIFTING AND HANDLING

When unloading the unit, it is highly recommended to avoid any sudden move in order to protect refrigerant circuit, copper tubes or any other unit component. Units can be lifted by using a forklift or, in alternative, using belts, being sure that the method of lifting does not damage the lateral panels and the cover. It is important to keep the unit horizontal at all time to avoid damages to the internal components.

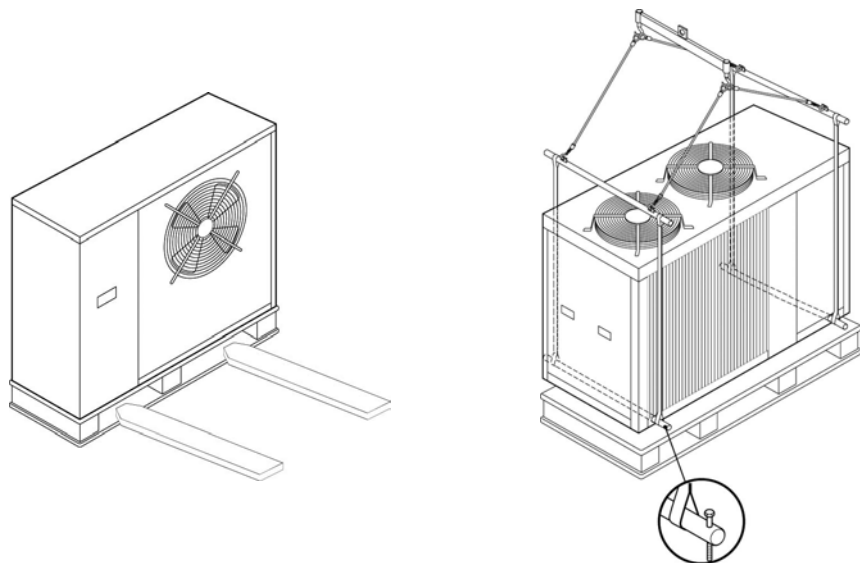


LOCATION AND MINIMUM TECHNICAL CLEARANCES


LZT units are designed for external installation: any cover over the unit and location near trees (even if they partially cover the unit) must be avoided in order to prevent air by-pass. It is advisable to create a proper basement, with a size similar to unit foot-print. Unit vibration level is very low: it is advisable however, to fit a rigid rubber band between basement and unit base-frame. If it is the case, it is possible to install anti-vibration mounts (spring or rubber), to keep vibrations at a very low level. Absolute care must be taken to ensure adequate air volume to the condenser. Re-circulation of discharge air must be avoided; failure to observe this point will result in poor performance or activation of safety controls. For these reasons it is necessary to observe the following clearances:

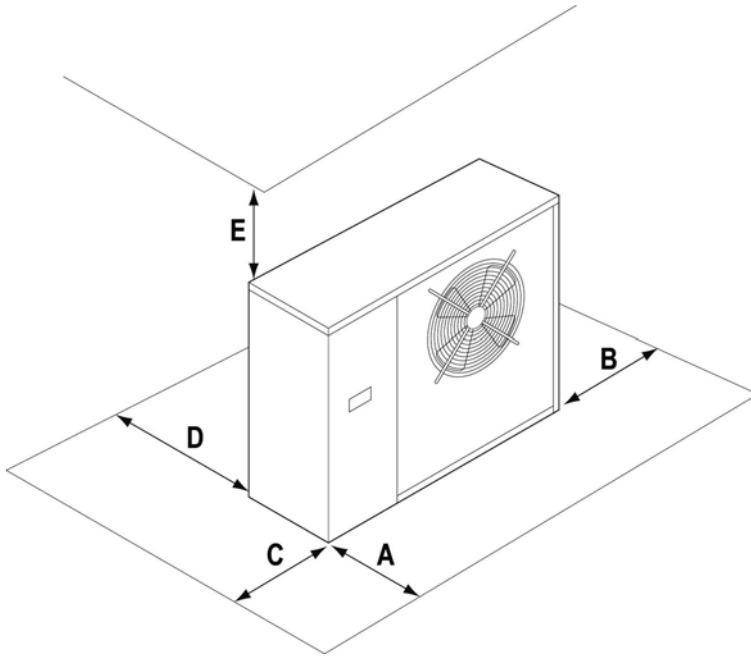

MOD	A	B	C	D	E
05	800	500	500	500	500
07	800	500	500	500	500
09-09T	800	500	500	500	500
13	1000	500	500	500	500
20	1000	500	500	500	500

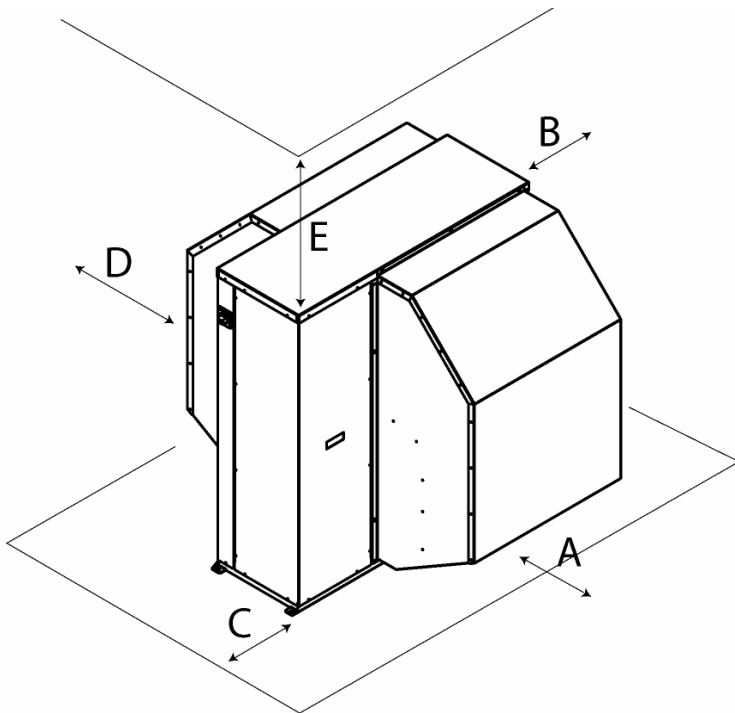


MOD	A	B	C	D	E
05	500	500	500	500	500
07	500	500	500	500	500
09-09T	500	500	500	500	500
13	500	500	500	500	500
20	500	500	500	500	500

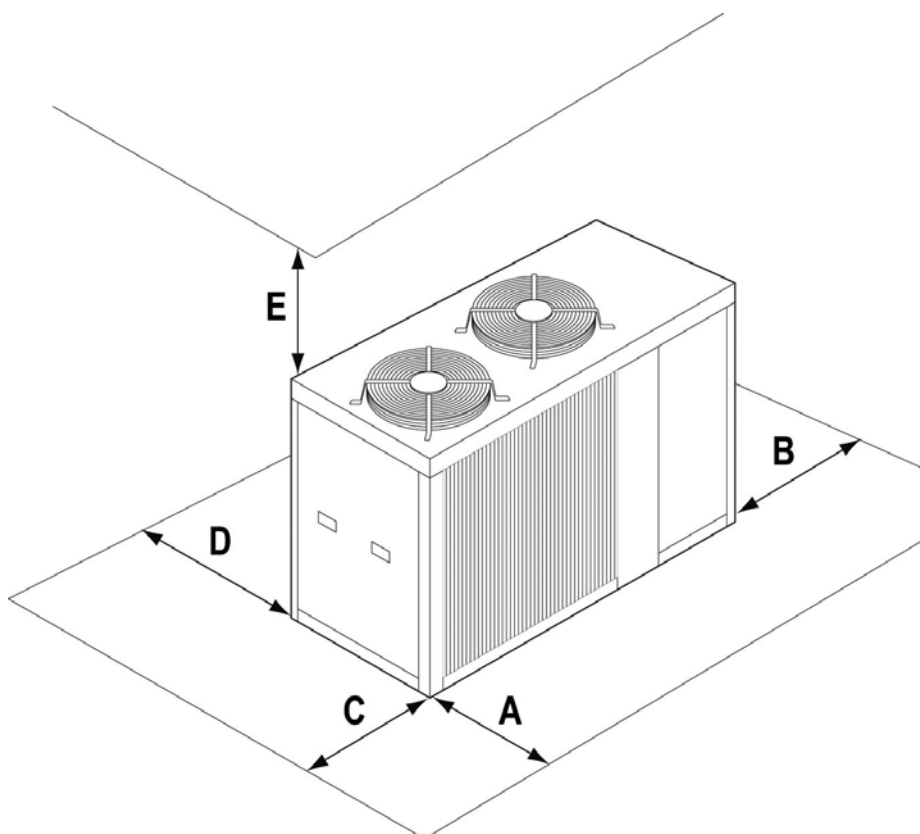

MOD	A	B	C	D	E
25	1000	800	800	800	3000
30	1000	800	800	800	3000
40	1000	800	800	800	3000

INSTALLATION OF THE HOODS

The sound attenuation hoods are supplied loose; they have to be mounted on the unit by Self-screwing screws M3,5 x 16 supplied in the installation kit.

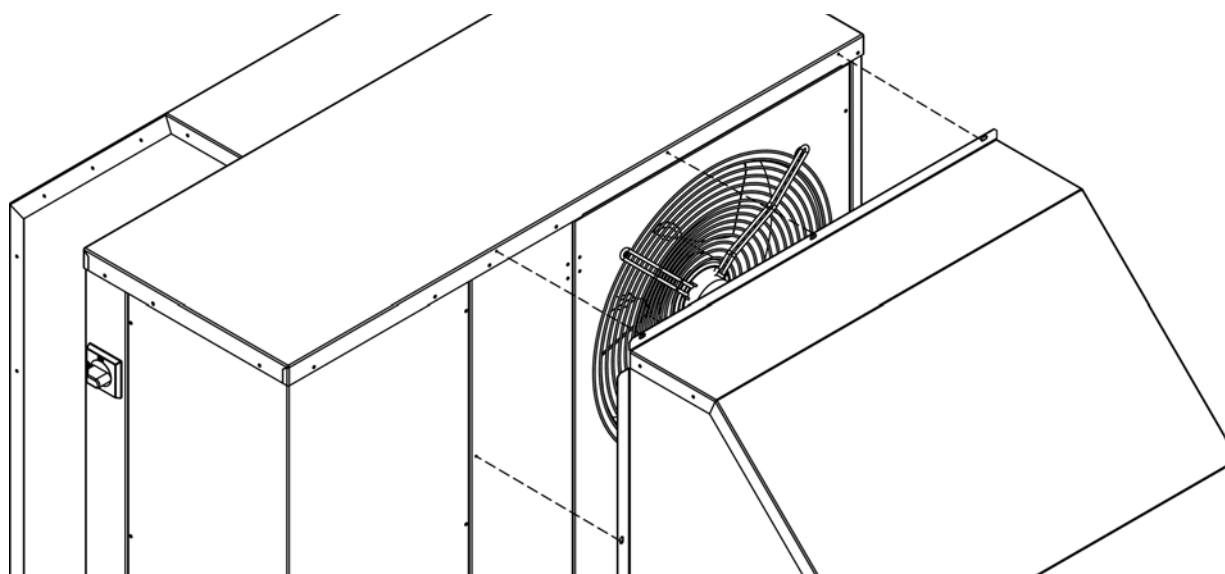



WARNING: The equipment should be installed so that maintenance and/or repair services be possible. The warranty does not cover costs due to lifting apparatus and platforms or other lifting systems required by the warranty interventions.



WARNING: All the maintenance operation must be done by **TRAINED PEOPLE** only.



WARNING: Before any service operation on the unit, be sure that the electric supply is disconnected.



WARNING: Inside the unit some moving components are present. Be very careful when operating in their surroundings even if the electric supply is disconnected.



WARNING: The top shell and discharge line of compressor are usually at high temperature level. Be very careful when operating in their surroundings.

WARNING: Aluminium coil fins are very sharp and can cause serious wounds. Be very careful when operating in their surroundings



WARNING: After servicing operation close the unit with cover panels, fixing them with locking screws

HYDRAULIC CONNECTIONS

Unit water pipe-work must be installed in accordance with national and local regulation, pipes can be made either in steel , galvanized steel or PVC. Pipes have to be designed depending on the nominal water flow and the hydraulic pressure drops of the system. All pipes must be insulated with closed-cell material of adequate thickness. The chillers have to be connected to the piping by using flexible joints. Piping should include:

- Temperature and pressure gauges for the ordinary maintenance or servicing operations.
- Shut-off manual valves to separate the unit from the hydraulic circuit.
- Metallic filters to be mounted on the inlet pipe with a mesh not larger than 1 mm.
- Vent valves, expansion tank with water filling, discharge valve.



WARNING: Unit water inlet must be in correspondence with the connection labelled: "USER WATER IN", otherwise the heat exchangers may freeze.




WARNING: It is compulsory to install on the USER WATER IN connection a metallic filter with a mesh not larger than 1 mm. The presence of the filter is to be considered mandatory, the warranty will no longer be valid if it is removed. The filter must be kept clean, so make sure it is clean after the unit has been installed, and then check it periodically.




WARNING: All units are factory supplied with the flow switch (it is factory installed in the "A" versions, supplied loose in the standard versions). The flow switch **MUST BE INSTALLED** on the water outlet connection (labelled USER WATER OUT); If the flow switch is altered, removed, or the water filter should not be present on the unit, the warranty will be invalidated. Please refer to the wiring diagram for flow switch electric connections.

BASIC VERSION HYDRAULIC COMPONENTS

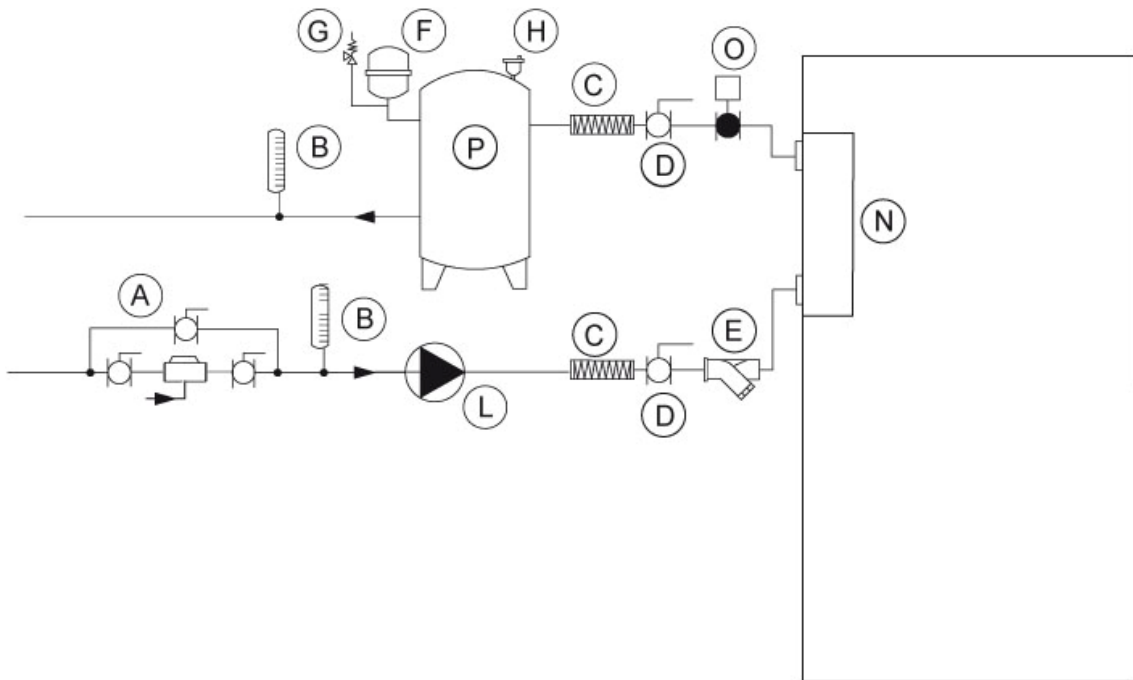


“A” VERSION HYDRAULIC COMPONENTS

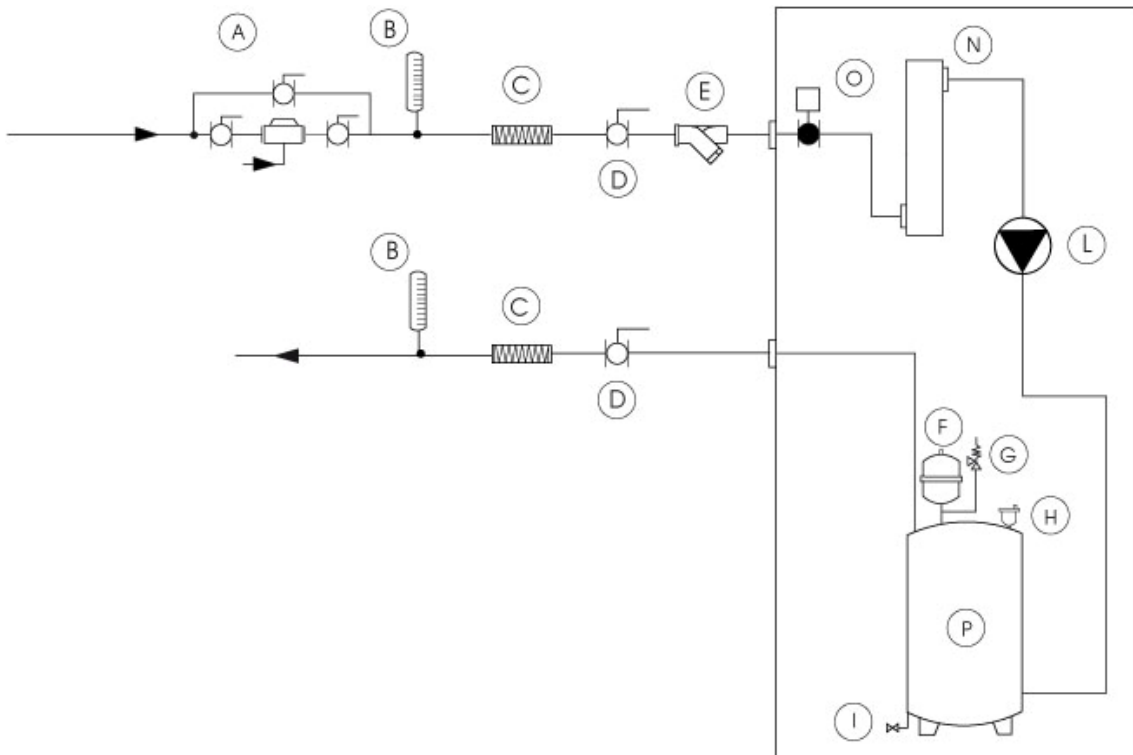


A	System filling group	L	Water pump
B	Thermometer	M	One way valve
C	Flexible connection	N	Evaporator
D	Ball shut-off valve	O	Flow switch
E	Water strainer	P	User Water tank
F	Expansion vessel	Q	Water manometer
G	Safety valve	R	Domestic hot water accumulator
H	Vent valve	S	Domestic hot water feeding
I	Water tank Drainage valve		

DOMESTIC HOT WATER HYDRAULIC CONNECTIONS (SW6 VERSIONS ONLY)

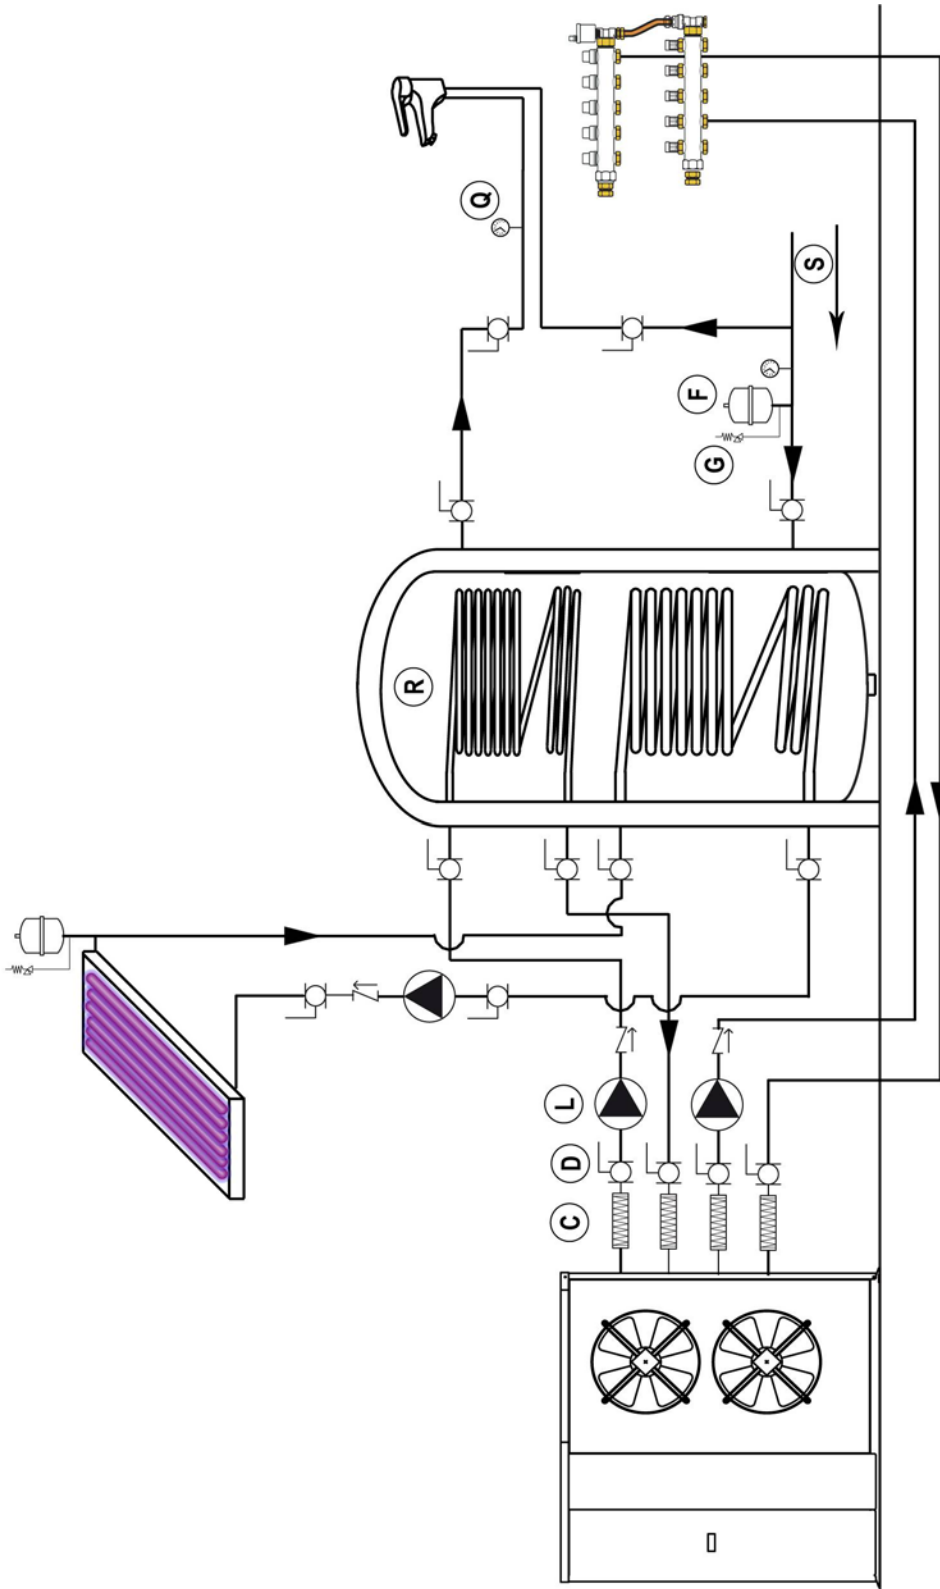


LZT REFRIGERANT CIRCUIT LAYOUT

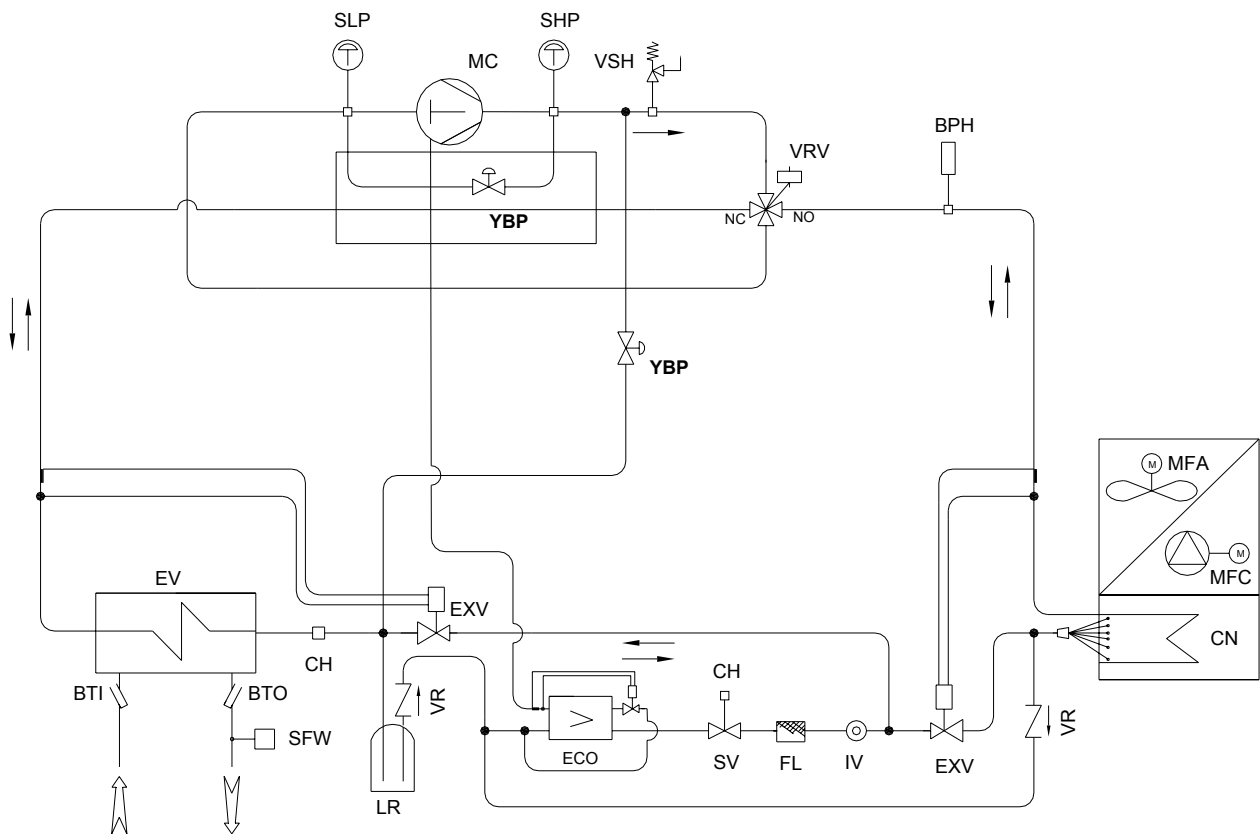

◇	Option	LR	Liquid receiver
BTI	Return water sensor	MC	Compressor
BTO	Supply water sensor	SFW	Flow switch
CH	Charging plug	SHP	High pressure switch
CN	Source heat exchanger	SLP	Low pressure switch
CNSW	Domestic hot water heat exchanger	SV	Manual valve
ECO	Economizer	VR	One way valve
EV	User heat exchanger	VRV	Reverse cycle valve
EXV	Thermostatic valve	VSH	High pressure safety valve
FL	Refrigerant filter	YBP	Hot gas by-pass valve
IV	Sight glass	YL	Solenoid valve
		YW	Solenoid valve

LZT/SW6 REFRIGERANT CIRCUIT LAYOUT

The LZT/SW6 version is suitable to produce cold water, hot water for heating and domestic use. The unit is supplied with an additional heat exchanger used as condenser for the domestic hot water that, is produced independently from the operation mode of the unit. The activation of the additional heat exchanger is done automatically by the microprocessor control when the domestic hot water temperature measured by the sensor is lower than the required set point.

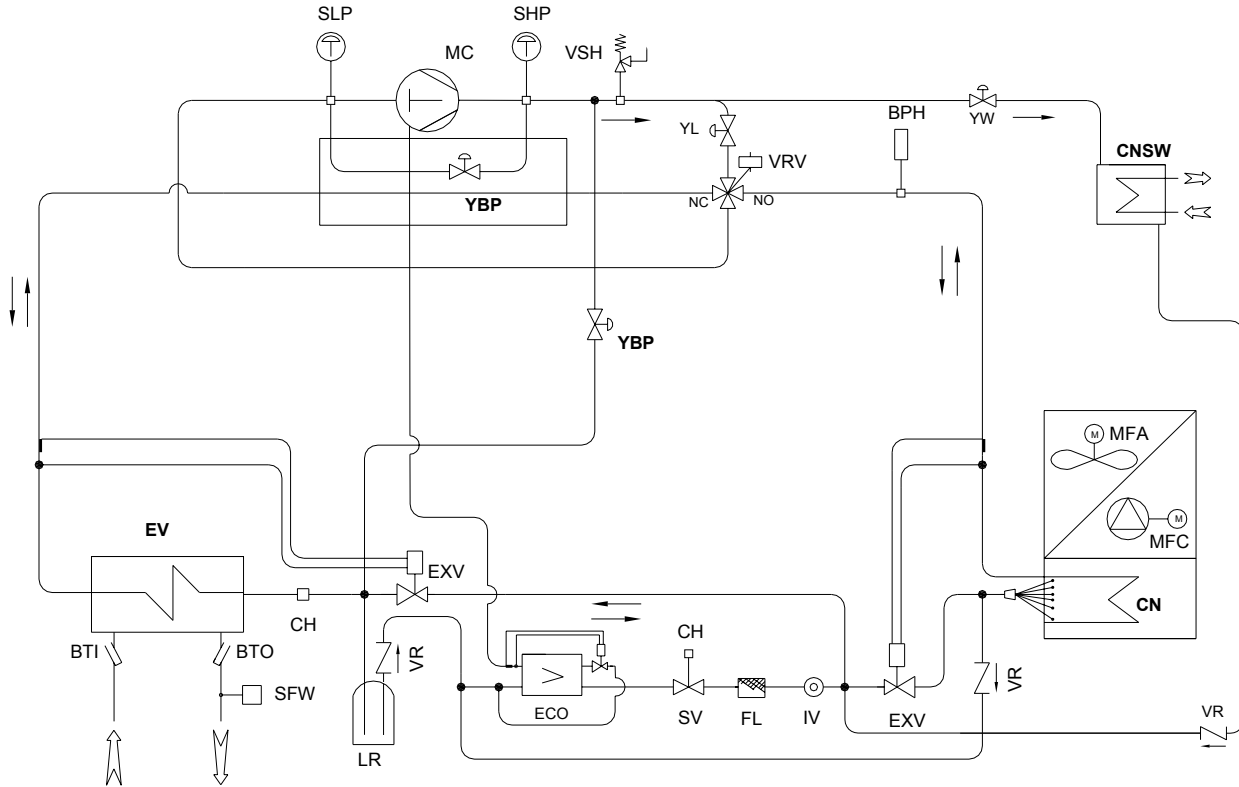

The LZT/SW6 unit, allows the production of cold and hot water, independently from the operation mode of the unit (heating or cooling).



During winter operation, if domestic hot water is required, it is temporarily stopped the water flow into the heating system. During summer operation the domestic hot water can be produced at the same time of the cold water flow.

Domestic hot water is available even when the cooling system is in stand-by or the set point has been reached.

The unit microprocessor gives always priority to the domestic hot water.

ELECTRICAL CONNECTIONS

It must be verified that electric supply is corresponding to the unit electric nominal data (tension, phases, frequency) reported on the label in the front panel of the unit. Power connections must be made in accordance to the wiring diagram enclosed with the unit and in accordance to the norms in force. Power cable and line protection must be sized according to the specification reported on the form of the wiring diagram enclosed with the unit.



WARNING: The line voltage fluctuations can not be more than $\pm 5\%$ of the nominal value, while the voltage unbalance between one phase and another can not exceed 2%. If those tolerances should not be respected, please contact our Company.



WARNING: Electric supply must be in the limits shown: in the opposite case warranty will terminate immediately. Before every operation on the electric section, be sure that the electric supply is disconnected.

WARNING: The Flow switch must be connected following the indication reported in the wiring diagram. Never bridge the flow switch connections in the terminal board. Guarantee will be invalidated if flow switch connections are altered or not properly made.



WARNING: The remote control panel is connected to the water chiller by 2 wires of 2,5 mm² section. Power supply cables must be separated by remote control wires. Maximum distance 50 metres.



WARNING: The remote control panel can not be installed in area in with strong vibrations, corrosive gases, excess of dirtiness or high humidity level. Leave free the area near the cooling openings.

START UP


Before start-up

- Check that all power cables are properly connected and all terminals are hardly fixed.
- The voltage at the phase R S T is the one shown in the unit labels.
- Check that there is not any refrigerant leakage.
- Check that crankcase heaters are powered correctly.
- Check that all water connections are properly installed and all indications on unit labels are observed.
- The system must be bleed off in order to eliminate any air.
- Before start up check that all the cover panel are re-located in the proper position and locked with fastening screws.



WARNING: Crankcase heaters must be powered at least **12 hours before start up** by closing the main switch (heaters are automatically supplied when main switch is closed). The crankcase heaters are working properly if after some minutes the compressor crankcase temperature is about 10÷15°C higher than ambient temperature

Start up and switch off

Push  for 5 seconds to run the unit in heating mode. Push the same key for 5 seconds to switch off.

Push  for 5 seconds to run the unit in cooling mode. Push the same key for 5 seconds to switch off.



WARNING: Never switch off the unit (for temporary stop), by opening the main switch: this component should be used only to disconnect the unit from power supply when the current is not passing through, i.e. when the unit is in OFF mode. Moreover, with no supply to crankcase heater, at the unit start up, compressor could be seriously damaged.



WARNING: Do not modify internal wiring of the unit otherwise warranty will terminate immediately.

WARNING: The summer/winter operation must be selected at the beginning of the related season. Frequent change over of the seasonal operation mode must be avoided in order to prevent severe damage to compressors.

CONTROLS DURING UNIT OPERATION

- Check the fans rotation. If the rotation is incorrect, disconnect the main switch and change over any two phases of the incoming main supply to reverse motor rotation (only for units with three-phase fan motors).
- Check that water temperature at evaporator inlet is near to the set point of the control thermostat.
- For "A" version units (units with pumps and storage tank) if the motor driven pump should be noisy, slowly close discharge shut-off valve until normal working conditions are restored. This trouble may occur when system pressure drop is quite different from pump available pressure.

Refrigerant charge checking

- After few hours the unit is working, check that sight glass shows a green colour core: if the core is yellow moisture would be present in the circuit. In this case it is necessary circuit dehydration to be carried out by qualified people only. Check that at the sight glass there is no continuous vapour bubbles presence. In this case additional refrigerant charge could be required. It is however allowed the presence of few vapour bubbles.
- Few minutes after the start up, working on summer operating mode (cooling), check that condensing temperature, is approximately 15 °C higher than condenser inlet air temperature. Check moreover that evaporation temperature is about 5 °C lower than the evaporator outlet temperature.
- Check that refrigerant superheat on the evaporator is about 5-7 °C
- Check if refrigerant sub-cooling on the condenser is about 5-7 °C.

MAINTENANCE AND PERIODIC CHECKS



WARNING: All this operation described in this chapter MUST BE DONE BY TRAINED PEOPLE ONLY. Before every operation of servicing on the unit, be sure that the electric supply is disconnected. The top shell and discharge line of compressor are usually at high temperature level. Be very careful when operating in their surroundings. Aluminium coil fins are very sharp and can cause serious wounds. Be very careful when operating in their surroundings. After servicing operation close the unit with cover panels, fixing them with locking screws.

It is a good rule to carry on periodic checks in order to verify the correct working of the unit.

- Check that safety and control devices work correctly as previously described (monthly).
- Check all the terminals on the electric board and on the compressor are properly fixed.
- Check and clean the sliding terminals of the contactors.
- Check refrigerant charge by sight glass; check leakages from compressor (monthly).
- Check water leakages in the hydraulic system (monthly).
- If the unit is to be expected to be stopped for a long period, unit hydraulic circuit should be emptied from all the tubes and heat exchanger. This operation is compulsory if, during seasonal stop, ambient temperature is expected to go down below the freezing point of employed mixture (typical seasonal operation).
- Check flow switch proper working, clean metallic filters on water piping (monthly).
- Check compressor crankcase heater proper supply and functioning (monthly).
- Clean finned coils metallic filters with compressed air in the opposite direction of the air flow. If filters should be fully clogged, clean them with a water jet (monthly).
- -Check mounting of fan blades and their balancing (every 4 months).
- Check the colour of the sight glass core (green=no moisture, yellow=moisture present): if it has a yellow colour, change the refrigerant filter (every 4 months).

REFRIGERANT CIRCUIT REPAIR

In the case that refrigerant circuit should be discharged, all the refrigerant must be recovered with proper machines. The system must be charged with nitrogen, using a gas bottle with a pressure reducing valve, until 15 bar pressure is reached. Any eventual leakage must be searched with a bubble leak finder. In case bubbles appear discharge the circuit before welding with proper alloys.



WARNING: Never use oxygen instead of nitrogen: explosions may occur.

ENVIRONMENT PROTECTION

According to European norms dealing with the use of depleting stratospheric ozone substances, it is forbidden to release refrigerants fluids in the atmosphere. They must be redelivered to the seller or to proper gathering points at the end of their operating life. Refrigerant R407C is mentioned among controlled substances and for this reason it must be subjected to the mentioned norms. **A particular care is recommended during service operations in order to reduce as much as possible any refrigerant loss.**

UNIT OUT OF SERVICE

Once the unit is arrived at the end of its life and needs to be removed or replaced, the following operations are recommended:

- the unit refrigerant has to be recovered by trained people and sent to proper collecting centre;
- compressor lubricating oil has to be recovered and sent to proper collecting centre;
- the frame and various components, if not usable any longer, have to be dismantled and divided according to their nature; particularly copper and aluminium, which are present in conspicuous quantity in the unit. These operations allow easy material recover and recycling process, reducing environmental impact.

FAULT FINDING

Cod	Meaning	Cause / Origin	Reset
P1	Pb1 probe alarm	Missing, faulty probe or resistance exceeding value	Automatic if the probe value recovers
P2	Pb2 probe alarm	Missing, faulty probe or resistance exceeding value	Automatic if the probe value recovers
P3	Pb3 probe alarm	Missing, faulty probe or resistance /current exceeding value	Automatic if the probe value recovers
P4	Pb4 probe alarm	Missing, faulty probe or resistance exceeding value	Automatic if the probe value recovers
A01	High pressure switch alarm	Digital input for high pressure activated	Manual after the alarm event expires, proceed with manual reset.
A02	Low pressure switch alarm	Digital input for low pressure activated	Manual after the alarm event expires, proceed with manual reset.

Cod	Meaning	Cause / Origin	Reset
A07	Anti freeze alarm	Digital input active anti freeze probe	Manual proceed with manual reset.
A08	Water flow alarm	Digital input active for AL06 duration.	Automatic It turns to manual after 3 events in 1 hour.
A09	Compressor 1 thermal protection alarm	Digital input active	Manual the event expires, then proceed with manual reset.
A10	Compressor 2 thermal protection alarm	Digital input active	Manual the event expires, then proceed with manual reset.
A11	Condenser fan thermal protection alarm	Digital input active	Manual the event expires, then proceed with manual reset.
A12	Defrost error alarm	Max defrost time	Automatic with next proper defrost cycle. Proceed with manual reset.
A13	Compressor 1 maintenance warning	Running hour > CO14	Manual Proceed with the hour reset procedure.
A14	Compressor 2 maintenance warning	Running hour > CO15	Manual Proceed with the hour reset procedure
A15	Water pump maintenance Warning	Running hour warning	Manual Proceed with the hour reset procedure
rtC	Clock alarm	Need to set the clock time	Manual Set the clock and then proceed with manual reset.
rtF	Clock alarm	Faulty clock control	Manual Proceed with manual reset, if nothing happens change the clock.
EE	EEPROM error alarm	Possible data losing	Manual Proceed with manual reset., if nothing happens the controller is locked, no regulation available.
ACF1	Configuration alarm	Heat pump configured without reversing valve	Automatic After parameter proper debug.
ACF2	Configuration alarm	without condensing probe control configuration	Automatic After parameter proper debug.
ACF3	Configuration alarm	Two digital inputs having the same function	Automatic After parameter proper debug.
FErr	Functioning alarm	Two digital inputs activated at the same time	Manual after the alarm event expires, proceed with manual reset.
AFr	Frequency alarm	The frequency of power supply is out of range	Automatic After the frequency becomes normal

REV.	□	□	□	□	□
□	□	□	□	□	□


Disegno/Date	Rev.	Data/Date	Foglio Sheet	N. 1 di 1	of 1	Dis./Draftsman	Visto/Checked by	Form.	Scala/Scale	Ordine-Order
	--	--	--	--	--			-	--	

Disegno/Date	Rev.	Data/Date	Foglio Sheet	N. 1 di 1	of 1	Dis./Draftsman	Visto/Checked by	Form.	Scala/Scale	Ordine-Order
	--	--	--	--	--			-	--	

Disegno/Date	Rev.	Data/Date	Foglio Sheet	N. 1 di 1	of 1	Dis./Draftsman	Visto/Checked by	Form.	Scala/Scale	Ordine-Order
	--	--	--	--	--			-	--	


OPZIONALE/OPTIONAL
 SOLO SU TAGLIE/ONLY ON SIZE

Denominazione/Denomination
SCHEMA DIMENSIONALE LZT 05-07-09-09T
DIMENSIONAL DRAWING LZT 05-07-09-09T

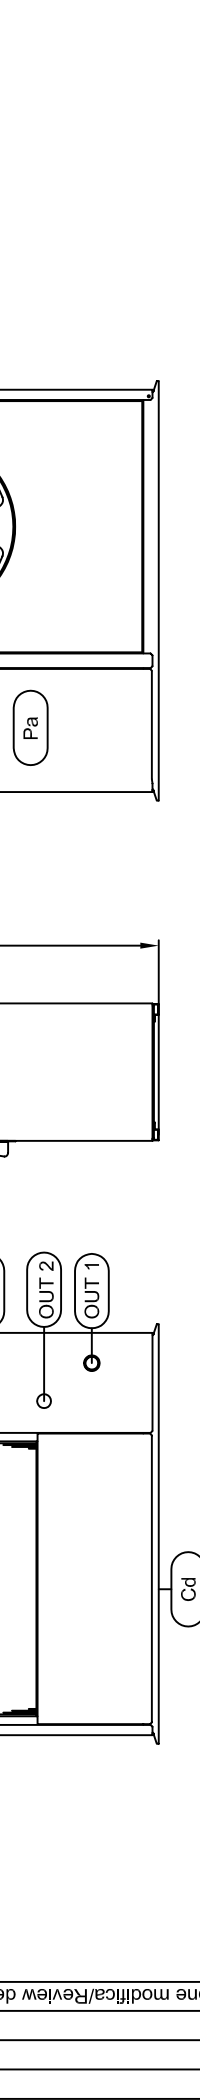

Rp	PANNELLO ASPORTABILE REMOVABLE PANEL
Es	INGRESSO ALIMENTAZIONE ELETTRICA POWER SUPPLY INLET
Pa	PANNELLO ISPEZIONABILE PANNEL INSPECTIONABLE
Cd	SCARICO CONDENSA OPZIONALE CONDENSATE DRAIN OPTIONAL
IN/SWG Ø3/4"GM	INGRESSO ACQUA CALDA SANITARIA DOMESTIC HOT WATER INLET
OUT/SWG Ø3/4"GM	USCITA ACQUA CALDA SANITARIA DOMESTIC HOT WATER OUTLET
IN Ø3/4"GM	INGRESSO ACQUA UTENTE LZT-LZT/A1 USER WATER INLET LZT-LZT/A1
OUT 1 Ø3/4"GM	USCITA ACQUA UTENTE LZT USER WATER OUTLET LZT
OUT 2 Ø6M1"	USCITA ACQUA UTENTE LZT/A1 USER WATER OUTLET LZT/A1

Proprietà riservata. Riproduzione vietata ai termini di legge-Copyright / Reserved proprietorship. Fonditèem reproduction to the terms of law-Copyright. M001-Rev.04/02/2006

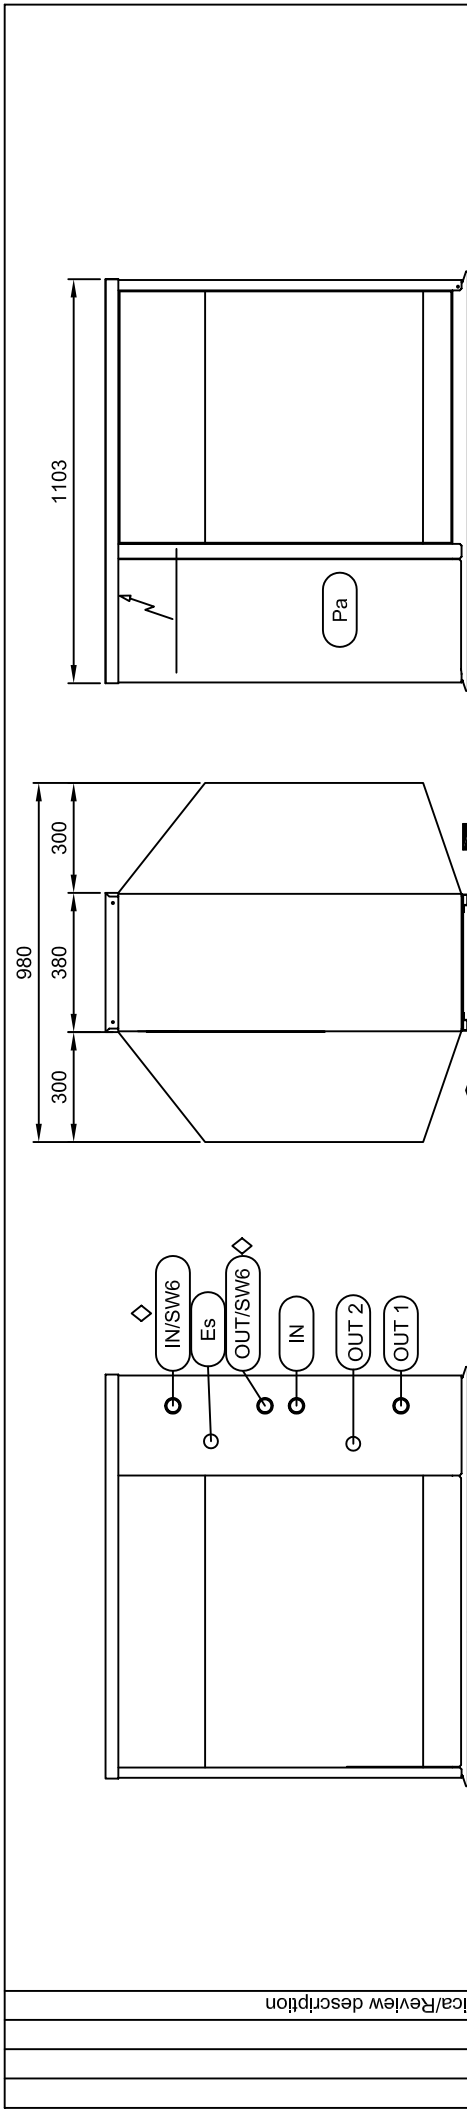

Rp	PANNELLO ASPORTABILE REMOVABLE PANEL
Es	INGRESSO ALIMENTAZIONE ELETTRICA POWER SUPPLY INLET
Pa	PANNELLO ISPEZIONABILE PANNEL INSPECTIONABLE
Cd	SCARICO CONDENZA OPZIONALE CONDENSATE DRAIN OPTIONAL
IN/SWG Ø3/4"GM	INGRESSO ACQUA CALDA SANITARIA DOMESTIC HOT WATER INLET
OUT/SWG Ø3/4"GM	USCITA ACQUA CALDA SANITARIA DOMESTIC HOT WATER OUTLET
IN Ø3/4"GM	INGRESSO ACQUA UTENTE LZT-LZT/A1 USER WATER INLET LZT-LZT/A1
OUT 1 Ø3/4"GM	USCITA ACQUA UTENTE LZT USER WATER OUTLET LZT
OUT 2 Ø6M1"	USCITA ACQUA UTENTE LZT/A1 USER WATER OUTLET LZT/A1



Denominazione/Denomination




SCHEMA DIMENSIONALE LZT 05-07-09-09T
DIMENSIONAL DRAWING LZT 05-07-09-09T

Disegno/Drawing	Rev.	Data/Date	Foglio Sheet	N. di 1 of	Scala/Scale	Form.	Visto/Checked by
SD.1LZT.0009A	--	--	1	1	--	-	
Sost. il dis./Replace draw.			Dis./Draftsman			Visto/Checked by	
						Ordine-Order	


- ◊ OPZIONALE/OPTIONAL
- SOLO SU TAGLIE/ONLY ON SIZE

Descrizione modifica/Review description

REV.

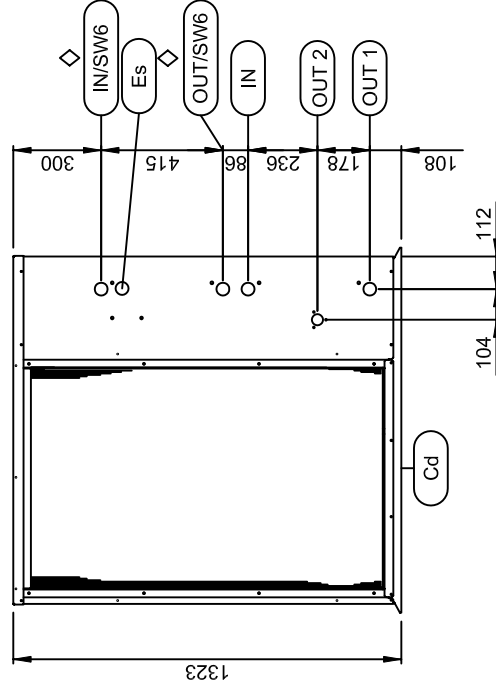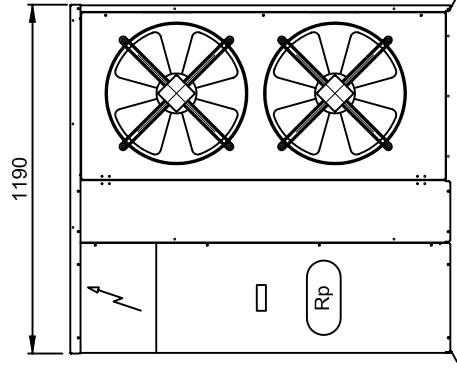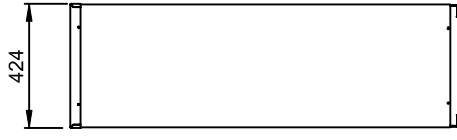

Rp	PANNELLO ASPORTABILE REMOVABLE PANEL
Es	INGRESSO ALIMENTAZIONE ELETTRICA POWER SUPPLY INLET
Cd	SCARICO CONDENSA OPZIONALE CONDENSATE DRAIN OPTIONAL
IN/SW6	INGRESSO ACQUA CALDA SANITARIA DOMESTIC HOT WATER INLET
OUT/SW6	INGRESSO ACQUA CALDA SANITARIA DOMESTIC HOT WATER OUTLET
IN	INGRESSO ACQUA UTENTE L2T-L2T/A1 USER WATER INLET L2T-L2T/A1
OUT 1	USCITA ACQUA UTENTE L2T USER WATER OUTLET L2T
OUT 2	USCITA ACQUA UTENTE L2T/A1 USER WATER OUTLET L2T/A1

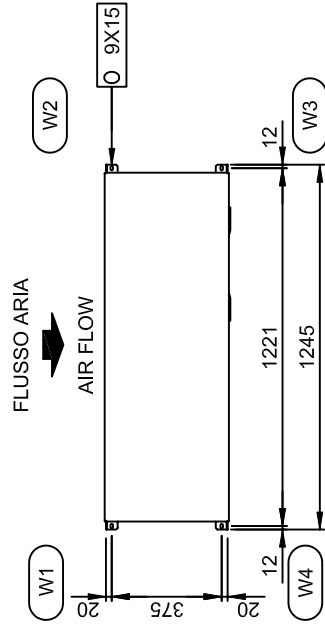

Descrizione modifica/Review description

Denominazione/Denomination

**SCHEMA DIMENSIONALE L2T 13
DIMENSIONAL DRAWING L2T 13**

Disegno/Drawing

SD.1L2T.0013A

Sost. il dis./Replace draw.

Rev.

--

Sost. dal dis./Replaced by draw.

Data/Date

--

Dis./Draftsman

Foglio Sheet

N. 1 di 1

Dis./Draftsman

Scala/Scale

--

Dis./Draftsman

Form.

-

Visto/Checked by



Ordine-Order


◇ OPZIONALE/OPTIONAL

○ SOLO SU TAGLIE/ONLY ON SIZE

REV.


□ □ □ □ □

REV.						
□						
□						
□						

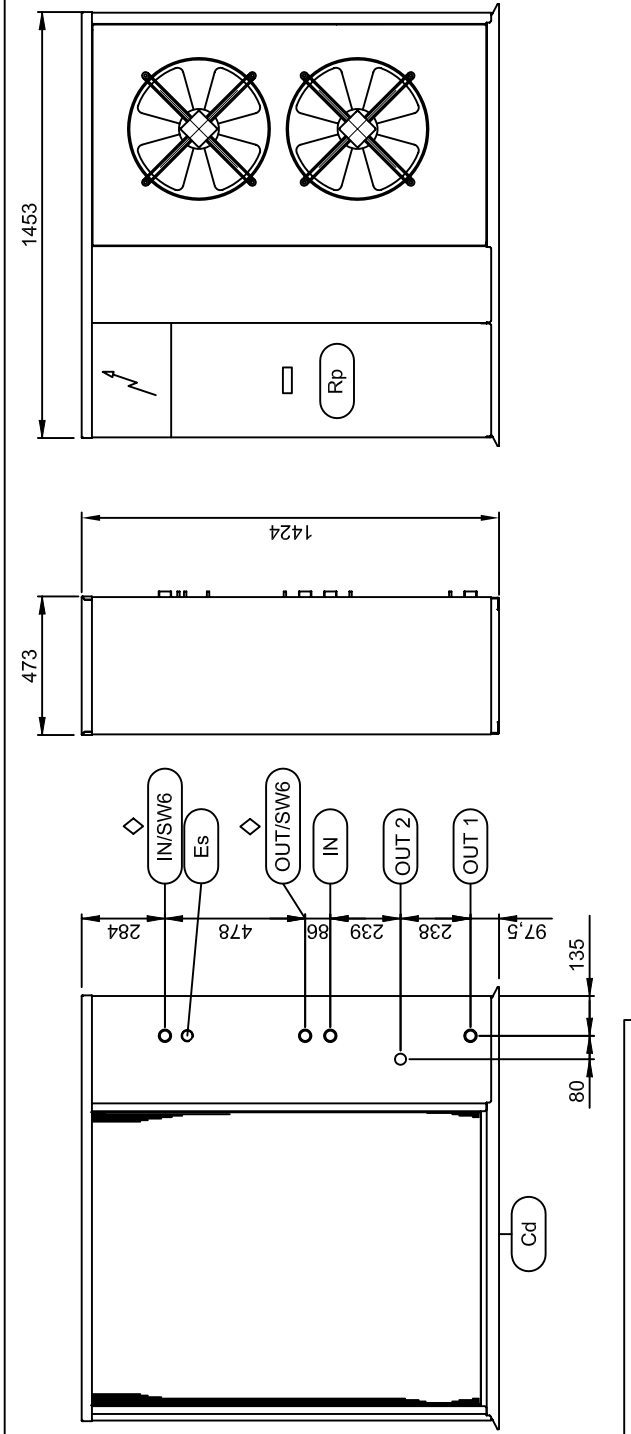

Rp	PANNELLO ASPORTABILE REMOVABLE PANEL
Es	INGRESSO ALIMENTAZIONE ELETTRICA POWER SUPPLY INLET
Cd	SCARICO CONDENSA OPZIONALE CONDENSATE DRAIN OPTIONAL
IN/SWG Ø1 ¼"GM	INGRESSO ACQUA CALDA SANITARIA DOMESTIC HOT WATER INLET
OUT/SWG Ø1 ¼"GM	INGRESSO ACQUA CALDA SANITARIA DOMESTIC HOT WATER OUTLET
IN Ø1 ¼"GM	INGRESSO ACQUA UTENTE LZT-LZT/A1 USER WATER INLET LZT-LZT/A1
OUT 1 Ø1 ¼"GM	USCITA ACQUA UTENTE LZT USER WATER OUTLET LZT
OUT 2 Ø6M1"	USCITA ACQUA UTENTE LZT/A1 USER WATER OUTLET LZT/A1


- OPZIONALE/OPTIONAL
- SOLO SU TAGLIE/ONLY ON SIZE

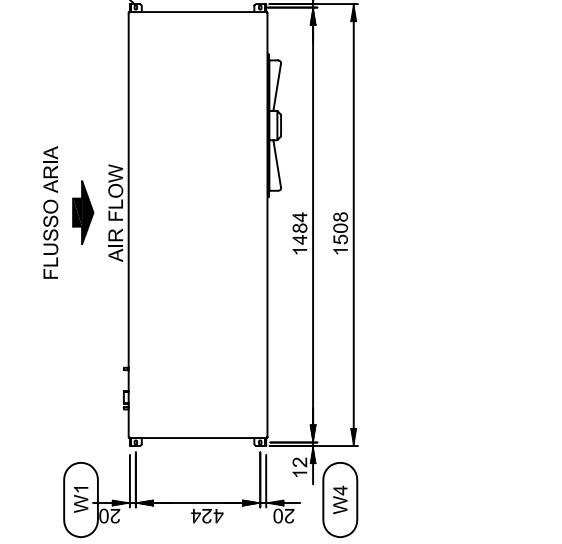

Denominazione/Denomination SCHEMA DIMENSIONALE LZT 20 DIMENSIONAL DRAWING LZT 20					
Disegno/Drawing SD.1LZT.0020A	Rev. --	Data/Date --	Foglio Sheet N. 1 di 1	Scala/Scale --	Form. -
Sost. il dis./Replace draw. Sost. dal dis./Replaced by draw.			Dis./Draftsman		Visto/Checked by
					Ordine-Order




REV.	□	□	□	□	□
□	□	□	□	□	□
□	□	□	□	□	□

Descrizione modifica/Review description

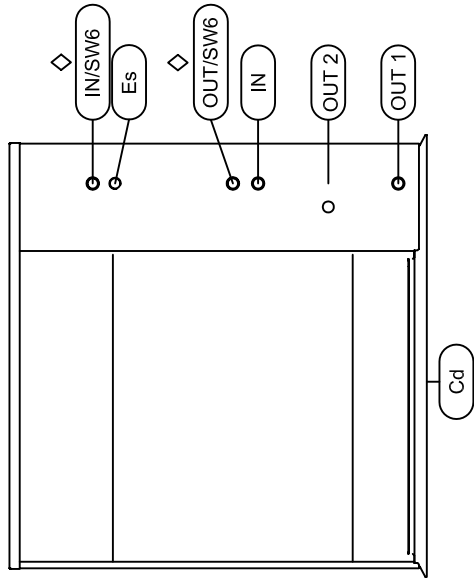

Rp	PANNELLO ASPORTABILE REMOVABLE PANEL
Es	INGRESSO ALIMENTAZIONE ELETTRICA POWER SUPPLY INLET
Cd	SCARICO CONDENZA OPZIONALE CONDENSATE DRAIN OPTIONAL
IN/SW6 Ø1 1/4"GM	INGRESSO ACQUA CALDA SANITARIA DOMESTIC HOT WATER INLET
OUT/SW6 Ø1 1/4"GM	INGRESSO ACQUA CALDA SANITARIA DOMESTIC HOT WATER OUTLET
IN Ø1 1/4"GM	INGRESSO ACQUA UTENTE LZT-LZT/A1 USER WATER INLET LZT-LZT/A1
OUT 1 Ø1 1/4"GM	USCITA ACQUA UTENTE LZT USER WATER OUTLET LZT
OUT 2 Ø6M1"	USCITA ACQUA UTENTE LZT/A1 USER WATER OUTLET LZT/A1

- Rp
- Es
- Cd
- IN/SW6
- OUT/SW6
- IN
- OUT 1
- OUT 2


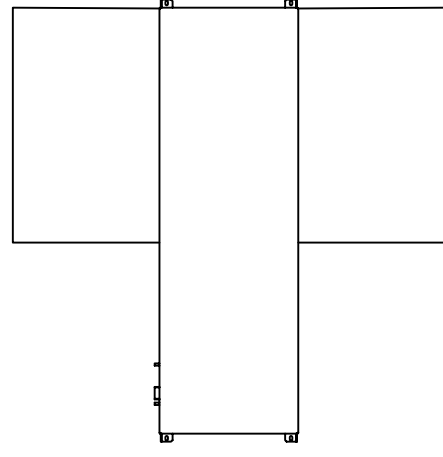
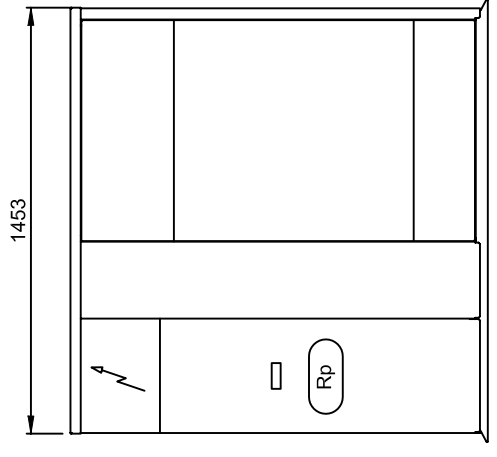
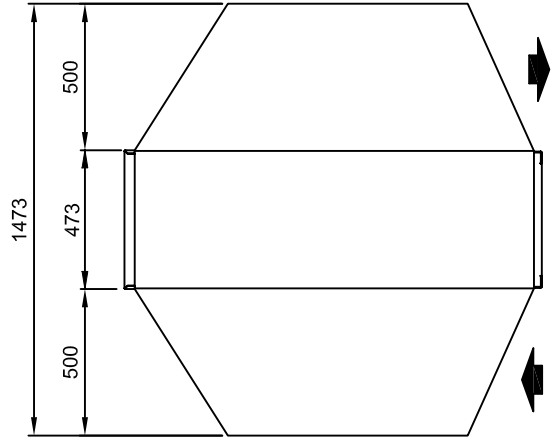


Denominazione/Denomination
SCHEMA DIMENSIONALE LZT 20
DIMENSIONAL DRAWING LZT 20

Disegno/Drawing SD.1LZT.0020A	Rev. --	Data/Date --	Foglio Sheet N. 1 di 1	Scala/Scale --	Form. -	Form. -
Sost. il dis./Replace draw.	Sost. dal dis./Replaced by draw.			Dis./Draftsman	Visto/Checked by	

◇ OPZIONALE/OPTIONAL
 ○ SOLO SU TAGLIE/ONLY ON SIZE

Ordine-Order

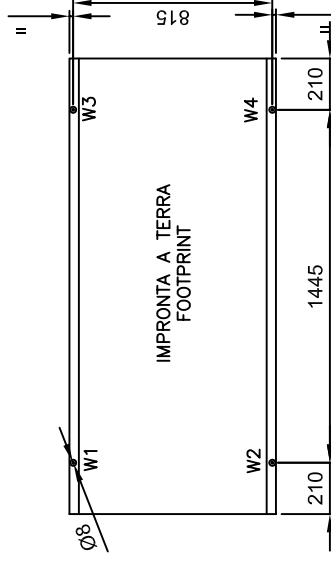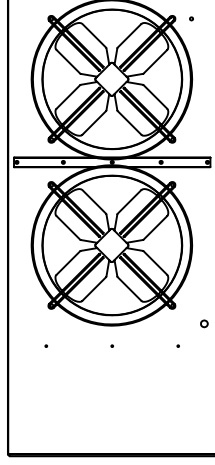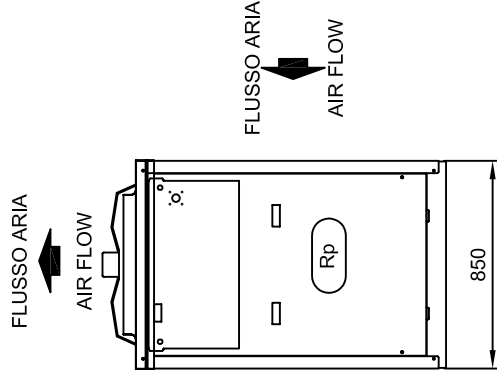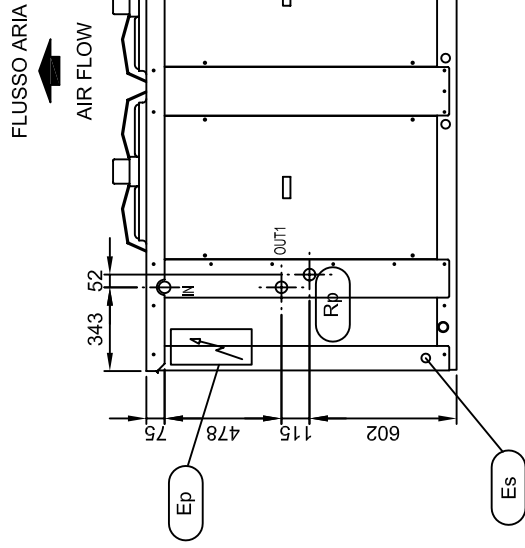

Rp	PANNELLO ASPORTABILE REMOVABLE PANEL
Ep	QUADRO ELETTRICO ELECTRICAL PANEL
Es	INGRESSO ALIMENTAZIONE ELETTRICA POWER SUPPLY INLET
Cd	SCARICO CONDENZA OPZIONALE CONDENSATE DRAIN OPTIONAL
IN ØGM1"1/4	INGRESSO ACQUA UTENTE USER WATER INLET
OUT 1 ØGM1"1/4	USCITA ACQUA UTENTE USER WATER OUTLET

Rp

Ep

Es

Cd

IN

OUT 1

Descrizione modifica/Review description

Visto/Checked by

Dis./Draftsman

Data/Date

REV.

- ◇ OPZIONALE/OPTIONAL
- SOLO SU TAGLIE/ONLY ON SIZE

Denominazione/Denomination
SCHEMA DIMENSIONALE LZT 25-30-40
DIMENSIONAL DRAWING LZT 25-30-40

Disegno/Drawing SD.1LZT.0041A	Rev. --	Data/Date --	Foglio Sheet	N. di of	Scala/Scale --	Form. -
Sost. il dis./Replace draw.			Dis./Draftsman		Visto/Checked by	
						Ordine-Order



HIDROS srl
Via dell'Industria 5
35020 Brugine (Pd)
Tel.+390-49-9731022
Fax.+390-49-5806928
Info@hidros.it
www.hidros.it

Technical data shown in this booklet are not binding.
HIDROS SRL shall have the right to introduce at any time whatever modifications necessary to the improvement of the product.